

# SHREDSAFE FEATURE

## 3 Position Safety Cover

The ShredSafe cover has 3 positions:



**CLOSED**



**OPEN**



**SAFETY  
CUT OFF**

**Position 1** Closed – Only CD shredding is possible through the marked slot. This prevents fingers and objects from being put into the shredder.

**Position 2** Open, Normal Operation – For shredding paper and credit cards. The central position allows for normal shredding operation.

**Position 3** Fully open, safety power off - Shredder not operational.

If fingers or objects are pushed into the entry slot when in position 2, then the ShredSafe cover will be pushed open fully, cutting the power to the shredder and preventing injury or damage.

The power indicator light will be off when in this position, and the shredder will not operate until the safety cover is returned to position 2.