

MAINTENANCE

For mesh & plastic components:

Use a soft cloth with a little clean water to wipe.

For Aluminum components:

Use a dry cloth to wipe.

DO NOT use solvents or petroleum based things to clean.

WARRANTY

The warranty applies to defects caused by normal use and does not cover maintenance, modifications or tampering.

ComfortWorkspace will not be responsible for damage caused by or associated with the installation and/or use of products in any manner other than in strict conformance with the instructions set forth in its installation manuals and instruction sheets and/or product literature.

Warranties are non-transferable.

Note: The polish line on aluminium base and welding line on plastic outer frame are part of the normal manufacturing process.

For more information, please contact ComfortWorkspace

User Guide



CHAIR PARTS

Headrest X 1 (OPTIONAL)



Armrest X 2

Ⓕ Left Armrest

Ⓖ Right Armrest

Seat X 1

Backrest X 1

Gaslift X 1

Base X 1

Caster X 5



TOOLS

 **For Headrest (OPTIONAL)**



M5x18mm

 Allen Wrench

 **For Armrest**



B1 1/4"X19/32

B2 1/4"X1


 **For Backrest**



M8x22mm

 Allen Wrench

ASSEMBLY STEPS

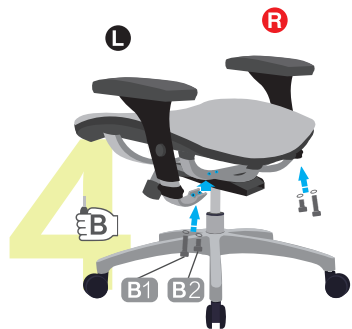

FUNCTION

ADJUSTMENTS



01 SINGLE LEVER CONTROL ★



02 BACKREST TILT TENSION




- Turn the knob clockwise to reduce the tilt tension " - ", for people who are lighter.
- Turn the knob anti-clockwise to increase the tilt tension " + ", for people who are heavier.

03 BACKREST HEIGHT ADJUSTMENT


Hold and lift upwards to adjust backrest height. When lift to the top, backrest will auto-return to the original position.

The adjustable range is 60mm with 4 positions to meet different height users.

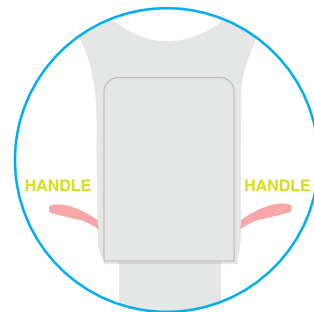

04 3D DYNAMIC LUMBAR SUPPORT

Automatic flexible lumbar support delivers full and superior comfortable support to user's lumbar area in any sitting postures.

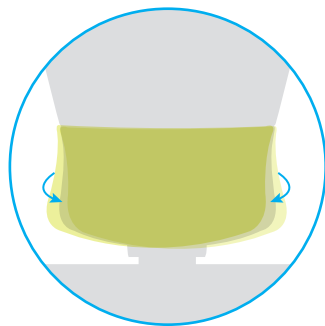

05 ARMREST



HEIGHT

Press the buttons of both sides to raise or lower the arm height, total 6 positions locking with 75mm range.



OPTIONAL



ARM DEPTH

Move the armrest forward or backward to adjust the arm depth, in total 50mm range.



ARM ANGLE

Swing the front end of armrest inward or outward to adjust the arm angle, total 3 positions locking with 30° range.

06 3D HEADREST

Optional function only



1D HEADREST HEIGHT

Hold the handle of headrest and raise or lower headrest height, total 6 positions with 40mm range.



2D HEADREST TILT

Press the button to adjust the headrest forward or backward, total 3 positions with 30° range.



3D HEADREST ANGLE

Hold two sides of headrest and rotate forward or backward to adjust the angle, in total 30° range.



HEALTHY SEATING ADJUSTING ADVICE

Sitting on seat cushion fully (your hips should touch chair's back) is the most important key to provide full and correct support to back, hips and legs.

- 1 Keep head & neck straight to lean headrest, eyes look straight and ahead**
3D (Height & Tilt & Angle) adjustable headrest can provide multi-directional support to your neck and reduce pressure on your neck.
- 2 Body lean backrest, ensuring good back support**
3D Dynamic lumbar support delivers superior full support to lumbar area when in any sitting posture. Height adjustable backrest can provide customized full upper-body support to back muscles along with your back movements.
- 3 Keep the elbow bend at 90° position and hands drop naturally, relax your shoulders**
3D armrest can provide complete arms with comfortable support when in any sitting postures to relax shoulder muscles.
- 4 Keep knees bend at 90°**
Waterfall Shape Seat with High density molded foam can deliver comfortable support to reduce pressure on hips and thighs and avoid pain for long-term sitting.
- 5 Keep 5~8cm between seat front edge to behind knees**
Seat depth adjustment suits different height users and give good support to thighs.
- 6 Feet flat on the floor or on a footrest**
This healthy seating can disperse pressure on hips and thighs to contribute to body blood circulation.

