



i Οδηγίες χρήσης

ΟΔΗΓΙΕΣ ΓΙΑ ΤΟ ΧΡΗΣΤΗ

ΨΥΓΕΙΟΚΑΤΑΨΥΚΤΗΣ

NO FROST

RPL-W20FN2

ΠΕΡΙΕΧΟΜΕΝΑ	
1. Οδηγίες Ασφαλείας	Σελ. 1~10
2. Επισκόπηση	Σελ. 11
3. Εγκατάσταση	Σελ. 12~18
4. Πίνακας ελέγχου	Σελ. 19~21
5. Καθημερινή χρήση	Σελ. 22~26

Για την ασφάλεια σας, αλλά και για να διασφαλίσετε τη σωστή χρήση, πριν από την εγκατάσταση και την πρώτη χρήση της συσκευής, διαβάστε προσεκτικά αυτό το εγχειρίδιο χρήσης, συμπεριλαμβανομένων των υποδείξεων και των προειδοποιήσεων του. Για την αποφυγή περιπτώσεων λαθών και ατυχημάτων, είναι σημαντικό να διασφαλιστεί ότι όλα τα άτομα που χρησιμοποιούν τη συσκευή είναι πλήρως εξοικειωμένα με τις λειτουργίες και τα χαρακτηριστικά ασφαλείας της. Αποθηκεύστε αυτές τις οδηγίες και βεβαιωθείτε ότι παραμένουν μαζί με την συσκευή εάν μετακινηθεί ή πωληθεί, έτσι ώστε όλοι όσοι τη χρησιμοποιούν στη διάρκεια της ζωής τους να ενημερώνονται κατάλληλα για τη χρήση και την ασφάλεια της συσκευής.

Για την ασφάλεια της ζωής και της ιδιοκτησίας, διατηρήστε τις προφυλάξεις αυτών των οδηγιών του χρήστη, καθώς ο κατασκευαστής δεν είναι υπεύθυνος για ζημιές που προκαλούνται από παράλειψη.

Ασφάλεια παιδιών και ευάλωτων ατόμων

- Αυτή η συσκευή μπορεί να χρησιμοποιηθεί από παιδιά ηλικίας από 8 ετών και άνω και άτομα με μειωμένες σωματικές, αισθητηριακές ή διανοητικές ικανότητες ή έλλειψη εμπειρίας και γνώση περιθωρίου, εάν τους έχει δοθεί πολύ καλή όραση ή εγκατάσταση σχετικά με τη χρήση της συσκευής σε χρηματοκιβώτιο τρόπο και να κατανοήσουν τους κινδύνους που ενέχονται.

- Τα παιδιά ηλικίας από 3 έως 8 ετών επιτρέπεται να γεμίζουν και να αδειάζουν αυτήν τη συσκευή.

- Τα παιδιά πρέπει να επιβλέπονται για να διασφαλιστεί ότι δεν παίζουν με τη συσκευή.
- Ο καθαρισμός και η συντήρηση του χρήστη δεν μπορεί να γίνει από παιδιά, εκτός εάν είναι ηλικίας άνω των 8 ετών και εποπτεύονται.
- Κρατήστε όλες τις συσκευασίες μακριά από παιδιά. Υπάρχει κίνδυνος ασφυξίας.
- Πριν απορρίψετε τη συσκευή, τραβήξτε το βύσμα από την πρίζα, κόψτε το καλώδιο σύνδεσης (όσο πιο κοντά στη συσκευή μπορείτε) και αφαιρέστε την πόρτα για να αποφύγετε την πιθανότητα ηλεκτροπληξίας ή παγίδευσης παιδιών που παίζουν.
- Εάν αυτή η συσκευή που διαθέτει μαγνητικά στεγανοποιητικά πορτών αντικαθιστά μια παλαιότερη συσκευή που έχει ένα ελατήριο (μάνδαλο) στην πόρτα ή το καπάκι, βεβαιωθείτε ότι το ελατήριο έχει αχρηστευτεί πριν απορρίψετε την παλιά συσκευή. Αυτό θα το αποτρέψει από το να γίνει κίνδυνος για ένα παιδί.

Γενική ασφάλεια

-  **ΠΡΟΕΙΔΟΠΟΙΗΣΗ!** Διατηρείτε τις οπές εξαερισμού, στο περίβλημα της συσκευής ή στην ενσωματωμένη δομή, μακριά από εμπόδια.
-  **ΠΡΟΕΙΔΟΠΟΙΗΣΗ!** Μην χρησιμοποιείτε μηχανικές συσκευές ή άλλα μέσα για να επιταχύνετε τη διαδικασία απόψυξης, εκτός από εκείνες που συνιστά ο κατασκευαστής.
-  **ΠΡΟΕΙΔΟΠΟΙΗΣΗ!** Μην καταστρέφετε το κύκλωμα ψυκτικού.
-  **ΠΡΟΕΙΔΟΠΟΙΗΣΗ!** Μην χρησιμοποιείτε άλλες ηλεκτρικές συσκευές (όπως συσκευές

παρασκευής παγωτού) στο εσωτερικό ψυκτικών συσκευών, εκτός εάν έχουν εγκριθεί για τον σκοπό αυτό από τον κατασκευαστή.

 **ΠΡΟΕΙΔΟΠΟΙΗΣΗ!** Μην αγγίζετε τη λάμπα εάν έχει ανάψει για μεγάλο χρονικό διάστημα επειδή μπορεί να είναι πολύ ζεστή.¹⁾

 **ΠΡΟΕΙΔΟΠΟΙΗΣΗ!** Όταν τοποθετείτε τη συσκευή, βεβαιωθείτε ότι το καλώδιο τροφοδοσίας δεν είναι παγιδευμένο ή κατεστραμμένο.

 **ΠΡΟΕΙΔΟΠΟΙΗΣΗ!** Μην τοποθετείτε πολλές φορητές προεκτάσεις τροφοδοσίας ή τροφοδοτικά στο πίσω μέρος της συσκευής.

- Μην αποθηκεύετε εκρηκτικές ύλες, όπως δοχεία αεροζόλ με εύφλεκτο προωθητικό σε αυτήν τη συσκευή.

- Το ψυκτικό ισοβουτάνιο (R-600a) περιέχεται στο κύκλωμα ψυκτικού της συσκευής, ένα φυσικό αέριο με υψηλό επίπεδο περιβαλλοντικής συμβατότητας, το οποίο ωστόσο είναι εύφλεκτο.

- Κατά τη μεταφορά και την εγκατάσταση της συσκευής, βεβαιωθείτε ότι κανένα από τα εξαρτήματα του κυκλώματος ψυκτικού δεν έχει υποστεί ζημιά.

- αποφύγετε τις γυμνές φλόγες και τις πηγές ανάφλεξης

- αερίστε καλά το δωμάτιο στο οποίο βρίσκεται η συσκευή

- Είναι επικίνδυνο να τροποποιήσετε τις προδιαγραφές ή να τροποποιήσετε αυτό το προϊόν με πολλούς τρόπους. Τυχόν ζημιά στο καλώδιο μπορεί να προκαλέσει βραχυκύκλωμα, πυρκαγιά ή/και ηλεκτροπληξία.

(1) Εάν υπάρχει φως στον θάλαμο.

- Αυτή η συσκευή προορίζεται να χρησιμοποιηθεί σε οικιακές και παρόμοιες εφαρμογές όπως
 - χώρους κουζίνας προσωπικού σε καταστήματα, γραφεία και άλλα περιβάλλοντα εργασίας
 - αγροικίες, ξενοδοχεία, μοτέλ και άλλα περιβάλλοντα κατοικιών.
 - περιβάλλοντα τύπου bed and breakfast
 - catering και παρόμοιες εφαρμογές μη λιανικού εμπορίου.

⚠ **ΠΡΟΕΙΔΟΠΟΙΗΣΗ!** Οποιαδήποτε ηλεκτρικά εξαρτήματα(βύσμα,καλώδιο τροφοδοσίας, συμπίεστής κ.λπ.) πρέπει να αντικατασταθούν από πιστοποιημένο αντιπρόσωπο ή εξειδικευμένο προσωπικό εξυπηρέτησης.

ΠΡΟΕΙΔΟΠΟΙΗΣΗ! Ο λαμπτήρας που παρέχεται με αυτήν τη συσκευή είναι ένας «λαμπτήρας ειδικής χρήσης» που μπορεί να χρησιμοποιηθεί μόνο με την παρεχόμενη συσκευή. Αυτή η "λάμπα ειδικής χρήσης" δεν μπορεί να χρησιμοποιηθεί για οικιακό φωτισμό.¹⁾

- Το καλώδιο τροφοδοσίας δεν πρέπει να επιμηκυνθεί.
- Βεβαιωθείτε ότι το βύσμα τροφοδοσίας δεν είναι σπασμένο ή κατεστραμμένο από το πίσω μέρος της συσκευής. Ένα σπασμένο ή κατεστραμμένο φις μπορεί να υπερθερμανθεί και να προκαλέσει πυρκαγιά.
- Βεβαιωθείτε ότι μπορείτε να έρθετε στο βύσμα της συσκευής.
- Μην τραβάτε το καλώδιο δικτύου.

(1) Εάν υπάρχει φως στον θάλαμο.

- Εάν η πρίζα είναι χαλαρή, μην εισάγετε το φις. Υπάρχει κίνδυνος ηλεκτροπληξίας ή πυρκαγιάς.
 - Δεν πρέπει να χειρίζεστε τη συσκευή χωρίς τη λάμπα.
 - Αυτή η συσκευή είναι βαριά. Πρέπει να προσέχετε κατά τη μετακίνηση.
 - Μην αφαιρείτε ούτε αγγίζετε αντικείμενα από το χώρο κατάψυξης εάν τα χέρια σας είναι υγρά / βρεγμένα, καθώς αυτό μπορεί να προκαλέσει εκδορές στο δέρμα ή εγκαύματα από παγετό / καταψύκτη.
 - Αποφύγετε την παρατεταμένη έκθεση της συσκευής στο άμεσο ηλιακό φως.
- Καθημερινή χρήση
- Μην βάζετε τίποτα ζεστό κοντά στα πλαστικά μέρη της συσκευής.
 - Μην τοποθετείτε προϊόντα διατροφής που ακουμπούν απευθείας στην πλάτη του καταψύκτη.
 - Τα κατεψυγμένα τρόφιμα δεν πρέπει να καταψύχονται ξανά αφού ξεπαγώσουν.¹⁾
 - Αποθηκεύστε τα προσυσκευασμένα κατεψυγμένα τρόφιμα σύμφωνα με τις οδηγίες κατασκευής κατεψυγμένων τροφίμων.¹⁾
 - Οι συστάσεις του κατασκευαστή περί αποθήκευσης πρέπει να τηρούνται αυστηρά. Ανατρέξτε στις σχετικές οδηγίες.
 - Μην τοποθετείτε ανθρακούχα ποτά στο χώρο της κατάψυξης καθώς δημιουργεί πίεση στο δοχείο, το οποίο μπορεί να προκαλέσει έκρηξη, με αποτέλεσμα να υποστεί ζημιά η συσκευή.¹⁾

(1) Εάν υπάρχει φως στον θάλαμο

- Οι γρανίτες μπορεί να προκαλέσουν εγκαύματα από τον πάγο εάν καταναλωθούν απευθείας από τη συσκευή.
- Για να αποφύγετε τη μόλυνση των τροφίμων, ακολουθήστε τις παρακάτω οδηγίες.
- Το άνοιγμα της πόρτας για μεγάλα χρονικά διαστήματα μπορεί να προκαλέσει σημαντική αύξηση της θερμοκρασίας στους θαλάμους της συσκευής.
- Καθαρίζετε τακτικά επιφάνειες που μπορούν να έρθουν σε επαφή με τρόφιμα και προσβάσιμα συστήματα αποχέτευσης.
- Καθαρίστε τις δεξαμενές νερού εάν δεν έχουν χρησιμοποιηθεί για 48 ώρες. Ξεπλύνετε το σύστημα νερού που είναι συνδεδεμένο σε παροχή νερού, εάν δεν έχει τραβηχτεί νερό για 5 ημέρες.
- Φυλάσσετε ωμό κρέας και ψάρι σε κατάλληλα δοχεία στο ψυγείο, για να μην έρχεται σε επαφή ή στάζει σε άλλα τρόφιμα.
- Οι θάλαμοι δύο αστέρων με κατεψυγμένα τρόφιμα (εάν παρουσιάζονται στη συσκευή) είναι κατάλληλοι για αποθήκευση προ-κατεψυγμένων τροφίμων, αποθήκευση ή παρασκευή παγωτού και παγακίων.
- Οι θάλαμοι ενός, δύο και τριών αστέρων (εάν εμφανίζονται στη συσκευή) δεν είναι κατάλληλοι για την ψύξη φρέσκων τροφίμων.
- Εάν η συσκευή παραμείνει κενή για μεγάλα χρονικά διαστήματα, απενεργοποιήστε την, κάντε απόψυξη, καθαρίστε την, στεγνώστε την και αφήστε την πόρτα ανοιχτή για να αποτρέψετε την ανάπτυξη μούχλας μέσα στη συσκευή.

Φροντίδα και καθαρισμός

- Πριν από τη συντήρηση, απενεργοποιήστε τη

συσκευή και αποσυνδέστε το φισ από την πρίζα δικτύου.

- Μην καθαρίζετε τη συσκευή με μεταλλικά αντικείμενα.
- Μη χρησιμοποιείτε αιχμηρά αντικείμενα για να αφαιρέσετε τον παγετό από τη συσκευή. Χρησιμοποιήστε μια πλαστική ξύστρα. ¹⁾
- Ελέγχετε τακτικά την αποχέτευση στο ψυγείο για απόψυξη νερού. Εάν είναι απαραίτητο, καθαρίστε την αποχέτευση.

Εάν η αποστράγγιση είναι μπλοκαρισμένη, θα συγκεντρωθεί νερό στο κάτω μέρος της συσκευής. ²⁾

Εγκατάσταση

Σημαντικό! Για ηλεκτρική σύνδεση ακολουθήστε προσεκτικά τις οδηγίες που δίνονται σε συγκεκριμένες παραγράφους.

- Αποσυνεχάστε τη συσκευή και ελέγξτε εάν υπάρχουν ζημιές σε αυτήν. Μην συνδέετε τη συσκευή εάν έχει υποστεί ζημιά. Αναφέρετε πιθανές ζημιές αμέσως στο μέρος απ' όπου την αγοράσατε. Σε αυτήν την περίπτωση διατηρήστε τη συσκευασία.
- Συνιστάται να περιμένετε τουλάχιστον τέσσερις ώρες πριν συνδέσετε τη συσκευή για να επιτρέψετε στο λάδι να επιστρέψει στον συμπιεστή.

1) Εάν υπάρχει θάλαμος καταψύκτη.

2) Εάν υπάρχει χώρος αποθήκευσης φρέσκων τροφίμων.

- Η επαρκής κυκλοφορία του αέρα θα πρέπει να εξασφαλίζεται γύρω από τη συσκευή, καθώς αυτό δεν οδηγεί σε υπερθέρμανση. Για να επιτύχετε επαρκή αερισμό ακολουθήστε τις οδηγίες που σχετίζονται με την εγκατάσταση.
- Όπου είναι δυνατόν, τα διαχωριστικά του προϊόντος πρέπει να βρίσκονται σε τοίχο για να αποφευχθεί η επαφή ή η πρόσφυση θερμών μερών (συμπιεστής, συμπυκνωτής) για την αποφυγή πιθανής πυράκτωσης.
- Η συσκευή δεν πρέπει να βρίσκεται κοντά σε καλοριφέρ ή κουζίνες.
- Βεβαιωθείτε ότι η πρίζα είναι προσβάσιμη μετά την εγκατάσταση της συσκευής.

Επισκευές

- Οποιαδήποτε εργασία που απαιτείται για τη συντήρηση της ηλεκτρικής συσκευής πρέπει να εκτελείται από εξειδικευμένο ηλεκτρολόγο ή αρμόδιο άτομο.
 - Αυτό το προϊόν πρέπει να επισκευάζεται από εξουσιοδοτημένο κέντρο επισκευών και πρέπει να χρησιμοποιούνται μόνο γνήσια ανταλλακτικά.
- ### **Εξοικονόμηση ενέργειας**
- Μην βάζετε ζεστό φαγητό στη συσκευή.
 - Μην στοιβάζετε τρόφιμα με μικρή απόσταση καθώς αυτό εμποδίζει την κυκλοφορία του αέρα.
 - Βεβαιωθείτε ότι το φαγητό δεν αγγίζει το πίσω μέρος του θαλάμου.
 - Εάν διακοπεί το ηλεκτρικό ρεύμα, μην ανοίξετε τις πόρτες.
 - Μην ανοίγετε συχνά τις πόρτες.
 - Μην κρατάτε τις πόρτες ανοιχτές για πολλή ώρα.
 - Μην ρυθμίζετε το θερμοστάτη σε υπερβολικές θερμοκρασίες.

- Όλα τα εξαρτήματα, όπως συρτάρια, μπαλκόνια ραφιών, πρέπει να φυλάσσονται στην θέση τους για χαμηλότερη κατανάλωση ενέργειας.

Προστασία Περιβάλλοντος ® Αυτή η συσκευή δεν περιέχει αέρια που θα μπορούσαν να καταστρέψουν τη στιβάδα του όζοντος, είτε στο ψυκτικό κύκλωμα είτε στα μονωτικά υλικά. Η συσκευή δεν πρέπει να απορρίπτεται μαζί με τα αστικά απορρίμματα και σκουπίδια. Ο μονωτικός αφρός περιέχει εύφλεκτα αέρια: η συσκευή πρέπει να απορρίπτεται σύμφωνα με τους κανονισμούς της συσκευής για παραλαβή από τις τοπικές αρχές. Αποφύγετε την πρόκληση ζημιάς στη μονάδα ψύξης, ειδικά τον εναλλακτή θερμότητας

Τα υλικά που χρησιμοποιούνται σε αυτήν τη συσκευή με το σύμβολο ♻ είναι ανακυκλώσιμα.



- Το σύμβολο στο προϊόν ή στη συσκευασία του υποδεικνύει ότι αυτό το προϊόν ενδέχεται να μην αντιμετωπίζεται ως οικιακά απόβλητα. Αντ' αυτού, θα πρέπει να μεταφερθεί σε κατάλληλα σημεία συλλογής για την ανακύκλωση ηλεκτρικού και ηλεκτρονικού εξοπλισμού. Εάν διασφαλίσετε ότι το προϊόν αυτό απορρίπτεται σωστά, θα βοηθήσετε στην αποτροπή πιθανών αρνητικών συνεπειών για το περιβάλλον και την ανθρώπινη υγεία, οι οποίες διαφορετικά θα μπορούσαν να προκληθούν από ακατάλληλο χειρισμό απορριμμάτων αυτού του προϊόντος. Για πιο λεπτομερείς πληροφορίες

σχετικά με την ανακύκλωση αυτού του προϊόντος, επικοινωνήστε με το τοπικό σας συμβούλιο, την υπηρεσία διάθεσης οικιακών απορριμμάτων ή το κατάστημα όπου αγοράσατε το προϊόν.

- Υλικά συσκευασίας

Τα υλικά με το σύμβολο είναι ανακυκλώσιμα.

Απορρίψτε τη συσκευασία σε κατάλληλα δοχεία συλλογής για ανακύκλωση.

Απόρριψη της συσκευής

1. Αποσυνδέστε το φισ από την πρίζα.
2. Κόψτε το καλώδιο δικτύου και πετάξτε το.




 ΠΡΟΕΙΔΟΠΟΙΗΣΗ!

Κατά την χρήση, επισκευή και απόρριψη της συσκευής, προσέξτε το σύμβολο παρόμοιο με την αριστερή πλευρά, το οποίο βρίσκεται στο πίσω μέρος της συσκευής (πίσω πάνελ ή συμπιεστής) με κίτρινο ή πορτοκαλί χρώμα.

Είναι προειδοποιητικό σύμβολο κινδύνου πυρκαγιάς. Υπάρχουν εύφλεκτα υλικά στους ψυκτικούς σωλήνες και στον συμπιεστή.

Να βρίσκεστε μακριά πηγή φωτιάς κατά τη χρήση, τη συντήρηση και την απόρριψη.

Επισκόπηση

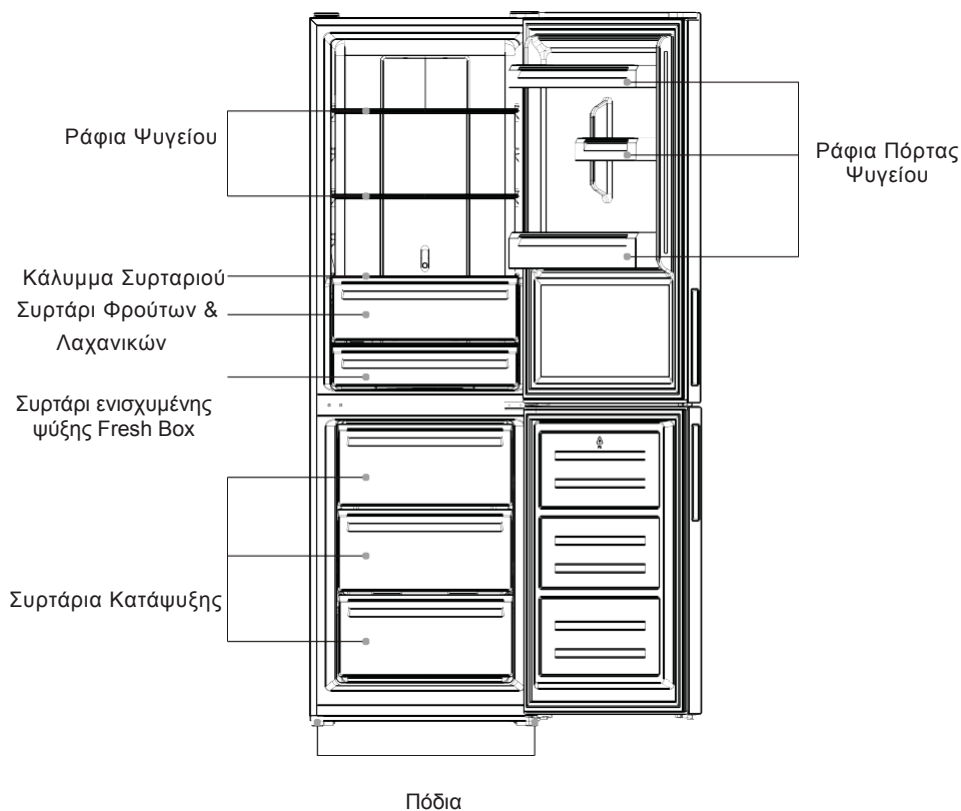

Σημείωση: Η παραπάνω εικόνα είναι μόνο για αναφορά. Η συσκευή στην πραγματικότητα μπορεί να διαφέρει.

Εγκατάσταση

Απαιτήσεις χώρου

- Διαλέξτε ένα μέρος το οποίο δεν βρίσκεται σε συνεχή έκθεση στον ήλιο.
- Διαλέξτε ένα μέρος με αρκετό χώρο ώστε οι πόρτες του ψυγείου να ανοίγουν εύκολα.
- Αφήστε αρκετό χώρο ώστε να μπορέσετε να εγκαταστήσετε το ψυγείο σε επίπεδη επιφάνεια.
- Αφήστε ελεύθερο χώρο δεξιά, αριστερά, πίσω και μπροστά κατά την εγκατάσταση. Αυτό θα βοηθήσει στη μείωση της κατανάλωσης ενέργειας.
- Αφήστε κενό τουλάχιστον 50 mm στις δυο πλευρές.

Τοποθέτηση

Εγκαταστήστε τη συσκευή σε μια θέση όπου η θερμοκρασία περιβάλλοντος αντιστοιχεί στην κλιματική κλάση που αναγράφεται στην πινακίδα της συσκευής:

Κλάση κλιματος	Θερμοκρασία χώρου
SN	+10° C - +32° C
N	+16° C - +32° C
ST	+16° C - +38° C
T	+16° C - +43° C

Θέση

Η συσκευή πρέπει να εγκατασταθεί μακριά από πηγές θερμότητας, όπως καλοριφέρ, λέβητες, άμεσο ηλιακό φως κ.λπ. Βεβαιωθείτε ότι ο αέρας μπορεί να κυκλοφορεί ελεύθερα γύρω από το πίσω μέρος της καμπίνας. Για να εξασφαλιστεί η βέλτιστη απόδοση, εάν η συσκευή είναι τοποθετημένη κάτω από ένα ντουλάπι, η ελάχιστη απόσταση μεταξύ της κορυφής της συσκευής και του ντουλαπιού πρέπει να είναι τουλάχιστον 100 mm. Στην ιδανική περίπτωση ωστόσο, η συσκευή δεν θα πρέπει να τοποθετείται κάτω από ντουλάπια. Η ακριβής ευθυγράμμιση εξασφαλίζεται από τη ρύθμιση των ποδιών στη βάση του ψυγείου.

 **Προσοχή!** Πρέπει να είναι δυνατό να αποσυνδέσετε τη συσκευή από την παροχή ρεύματος, το φινιρίσμα πρέπει να είναι εύκολα προσβάσιμο μετά την εγκατάσταση.

Ηλεκτρική σύνδεση

Πριν τη συνδέσετε, βεβαιωθείτε ότι η τάση και η συχνότητα που εμφανίζονται στην πινακίδα αντιστοιχούν στην τροφοδοσία της χώρας σας. Η συσκευή πρέπει να είναι γειωμένη. Το βύσμα του καλωδίου παροχής ρεύματος είναι εφοδιασμένο με μια επαφή για το σκοπό αυτό. Αν η πρίζα σας δεν είναι γειωμένη, συνδέστε τη συσκευή σε μια ξεχωριστή γείωση σε συμμόρφωση με τους ισχύοντες κανονισμούς, αφού συμβουλευθείτε έναν εξειδικευμένο ηλεκτρολόγο. Ο κατασκευαστής δεν φέρει καμία ευθύνη σε περίπτωση που δεν τηρούνται οι παραπάνω προφυλάξεις ασφαλείας. Αυτή η συσκευή συμμορφώνεται με τις οδηγίες της Ε.Ε.




Εγκατάσταση

Αναστροφή της πόρτας



Πριν την αναστροφή της πόρτας ετοιμάστε τα παρακάτω εργαλεία και υλικά: Ίσιο κατασαβίδι, σταυροκατασάβιδο, γαλλικό κλειδί και τα εξαρτήματα που εμπεριέχονται στο σακουλάκι:

Κάλυμμα μεντεσέ
Αριστερής Πόρτας x 1


Αριστερό κλείστρο πάνω πόρτας x 1 Αριστερό κλείστρο κάτω πόρτας x 1





1. Ξεβιδώστε το κάλυμμα του επάνω μεντεσέ και αποσυνδέστε το σύνδεσμο του διακόπτη πόρτας και των καλωδίων.

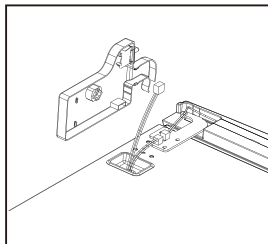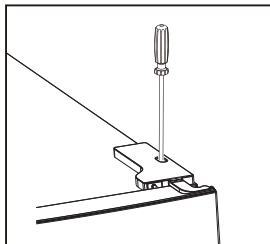

2. Ξεβιδώστε τον επάνω μεντεσέ.


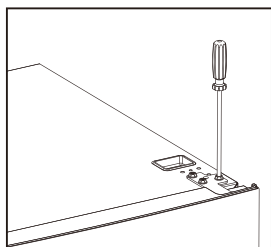


3. Αφαιρέστε τον πείρο με ένα κατασαβίδι και αναποδογυρίστε την βάση του μεντεσέ. Στη συνέχεια επαναφέρετε τον πείρο στο βραχίονα του μεντεσέ.

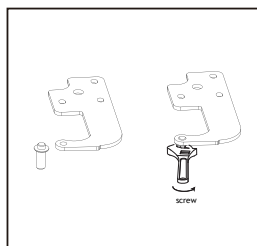
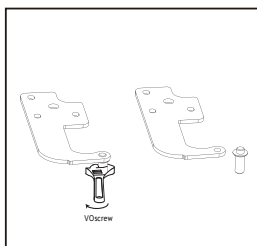


Εγκατάσταση




4. Μετακινήστε τον διακόπτη της πόρτας από το δεξί κάλυμμα του μεντεσέ στο αριστερό που είναι μέσα στο σακουλάκι.

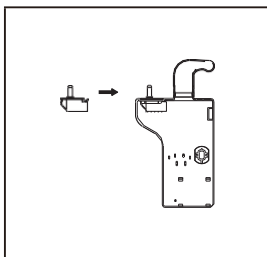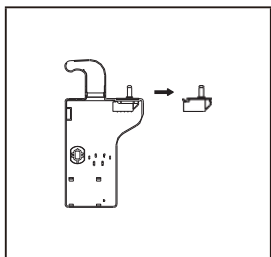


5. Αφαιρέστε το κάλυμμα στην κορυφή της επάνω πόρτας και μετακινήστε τη σύνδεση καλωδίων από την δεξιά μεριά στην αριστερή, επανατοποθετήστε το κάλυμμα.

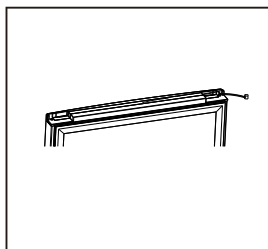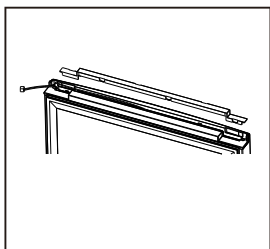

6. Μετακινήστε το αριστερό επάνω κάλυμμα στην δεξιά μεριά.

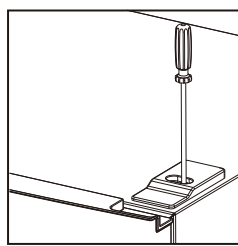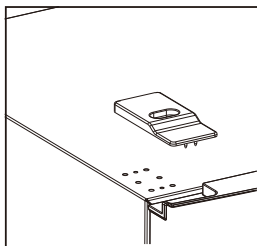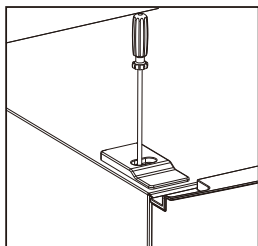


7. Αφαιρέστε την επάνω πόρτα, βγάλτε την βίδα από τον μεσαίο μεντεσέ με το σταυροκατσάβιδο και στη συνέχεια αφαιρέστε την κάτω πόρτα.


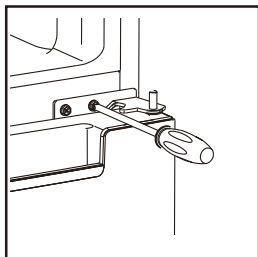


Εγκατάσταση



8. Μετακινήστε τα καλύμματα των μεντεσέδων από την αριστερή μεριά στη δεξιά.

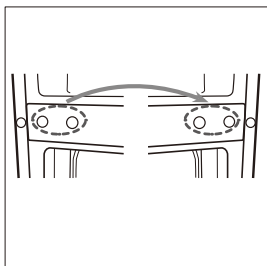

9. Ξεβιδώστε τον κάτω μεντεσέ και αφαιρέστε τα πόδια και από τις δυο μεριές.

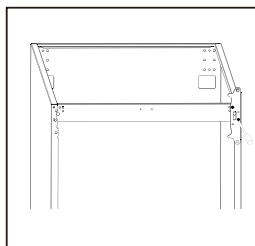
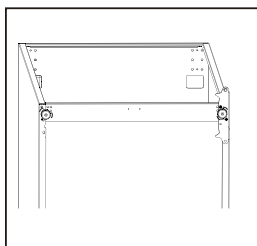


10. Ξεβιδώστε και αφαιρέστε τον πείρο του κάτω μεντεσέ γυρίστε τον βραχίονα από την αντίθετη πλευρά και βιδώστε τον πείρο.

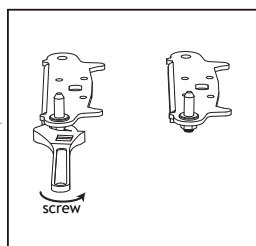
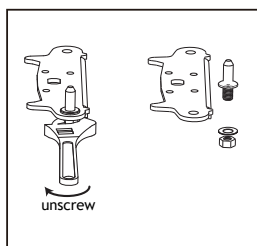


Εγκατάσταση


11. Επανατοποθετήστε τον βραχίονα προσαρμόζοντας τον πείρο του κάτω μεντεσέ. Αντικαταστήστε και τα δυο ποδαράκια.

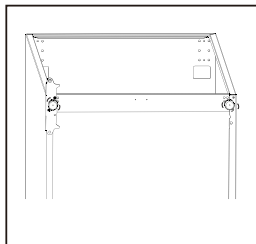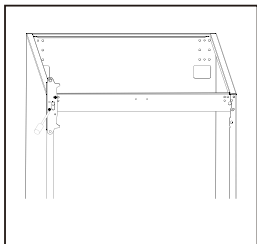

12. Αφαιρέστε τις πλαστικές υποδοχές του πείρου από το κάτω μέρος της πάνω και κάτω πόρτας, έπειτα πάρτε νέες υποδοχές από το σακουλάκι (ή χρησιμοποιήστε τις ίδιες εφόσον ταιριάζουν) και τοποθετήστε τις στην αριστερή μεριά.

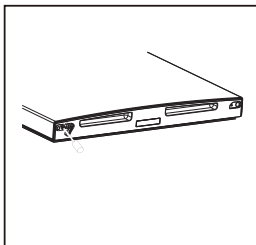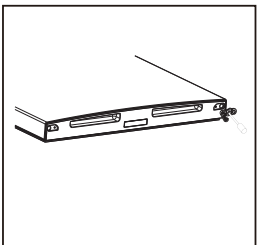


13. Αποσυνδέστε τα λάστιχα πόρτας του ψυγείου και της κατάψυξης και ύστερα συνδέστε τα αφού τα έχετε περιστρέψει.

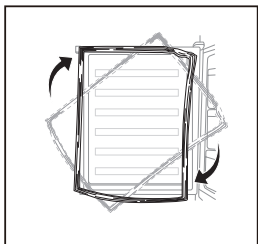


Εγκατάσταση

14. Εγκαταστήστε την κάτω πόρτα, ρυθμίστε και στερεώστε τον μεσαίο μεντεσέ πάνω στην καμπίνα.


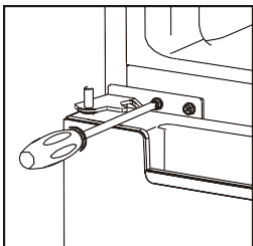


15. Αντικαταστήστε την επάνω πόρτα, βεβαιωθείτε ότι η πόρτα είναι ευθυγραμμισμένη με την καμπίνα για να βεβαιωθείτε ότι το λάστιχο της πόρτας σφραγίζει καλά την καμπίνα. Έπειτα

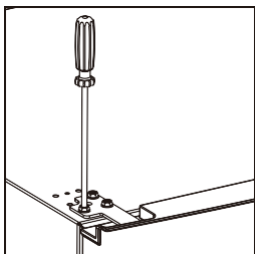


συνδέστε την πόρτα με την καμπίνα βιδώνοντας σφιχτά τον επάνω μεντεσέ.

16. Συνδέστε τον σύνδεσμο των καλωδίων από την πόρτα και την καμπίνα. Αντικαταστήστε το επάνω κάλυμμα του μεντεσέ. Πριν βιδώσετε το κάλυμμα, συνδέστε τους ακροδέκτες του διακόπτη της πόρτας.

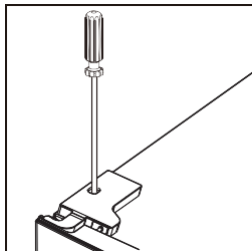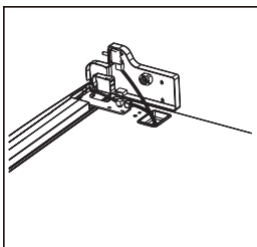


Εγκατάσταση

Τοποθετήστε την εξωτερική λαβή της πόρτας (εάν υπάρχει εξωτερική λαβή)

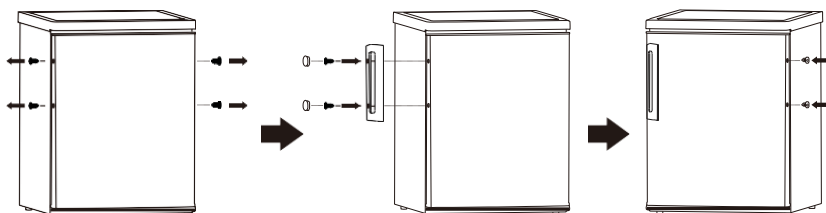

Απαιτούμενος χώρος


- Διατηρήστε αρκετό χώρο για το άνοιγμα της πόρτας.
- Διατηρήστε τουλάχιστον 50mm κενό και στις δύο μεριές.

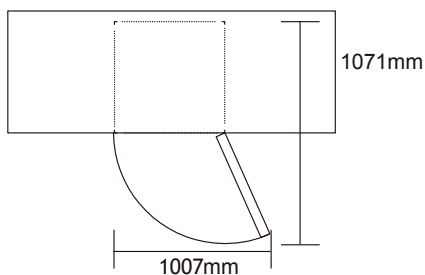

Αλλαγή ύψους της συσκευής


Για να γίνει αυτό ρυθμίστε τα δύο μπροστινά πόδια της συσκευής.

Εάν η συσκευή δεν είναι επίπεδη, τα μαγνητικά λάστιχα δεν θα σφραγίζουν καλά στις πόρτες.

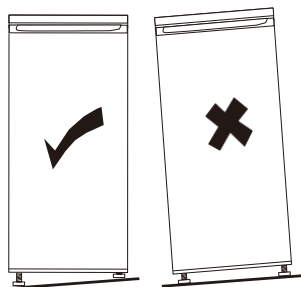

Πίνακας ελέγχου

Χρησιμοποιώντας τον πίνακα ελέγχου

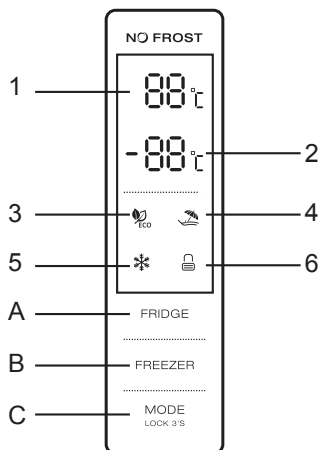

1.1 Λειτουργία Κουμπιού

- A. Έλεγχος θερμοκρασίας στο ψυγείο
- B. Έλεγχος θερμοκρασίας στην κατάψυξη
- C. Λειτουργία / Κλείδωμα / Ξεκλείδωμα

1.2 Οθόνη LED

- 1. Θερμοκρασία Ψυγείου
- 2. Θερμοκρασία Κατάψυξης
- 3. Λειτουργία ECO
- 4. Λειτουργία Holiday
- 5. Λειτουργία Super
- 6. Κλείδωμα / Ξεκλείδωμα

2.0 Συνθήκη Λειτουργίας

- a. Ο πίνακας ελέγχου είναι 100% αναμμένος για 3 δευτερόλεπτα πριν σβήσει. Το σύστημα θα κλειδωθεί αυτόματα 25 δευτερόλεπτα μετά την τελευταία εντολή. Μετά το κλείδωμα, το φως θα είναι εκτός λειτουργίας 30 δευτερόλεπτα μετά την τελευταία εντολή.
- b. Και οι δυο προκαθορισμένες θερμοκρασίες του ψυγείου και της κατάψυξης θα εμφανίζονται στην οθόνη.

2.1 Οθόνη

- 211 Η οθόνη θα ανάψει για 2 λεπτά μόλις η πόρτα του ψυγείου ανοίξει.

Πίνακας ελέγχου

- 212 Η οθόνη θα ανάβει με οποιαδήποτε λειτουργία του κουμπιού, ενώ το φως θα σβήσει 2 λεπτά μετά την τελευταία λειτουργία.
- 213 Οθόνη κατά την διάρκεια της κανονικής λειτουργίας
Ένδειξη της θερμοκρασίας του ψυγείου: Δείχνει τη θερμοκρασία της τρέχουσας ρύθμισης.
Ένδειξη της θερμοκρασίας της κατάψυξης: Δείχνει τη θερμοκρασία της τρέχουσας ρύθμισης.

3.0 Λειτουργία πλήκτρων

3.1 Έλεγχος θερμοκρασίας ψυγείου

Έλεγχος θερμοκρασίας του χώρου της συντήρησης:

Το κουμπί μπορεί να χρησιμοποιηθεί στις λειτουργίες που καθορίζονται από τον χρήστη και στη λειτουργία Super. Αφού εισάγετε την θερμοκρασία για τον χώρο της συντήρησης, το κουμπί αναβοσβήνει.

Αγγίζοντας το πλήκτρο διαδοχικά, η θερμοκρασία αλλάζει κυκλικά σε "2°C, 3°C, 4°C, 5°C, 6°C, 7°C, 8°C", αφού αναβοσβήσει 5 δευτερόλεπτα σημαίνει ότι η επιλεγμένη θερμοκρασία έχει οριστεί.

3.2 Έλεγχος θερμοκρασίας κατάψυξης

Το κουμπί μπορεί να χρησιμοποιηθεί στις λειτουργίες που καθορίζονται από τον χρήστη και στη λειτουργία Holiday. Αφού εισάγετε την θερμοκρασία για τον χώρο της κατάψυξης, το κουμπί αναβοσβήνει.

Αγγίζοντας το πλήκτρο διαδοχικά, η θερμοκρασία αλλάζει κυκλικά από -14°C έως -22°C, αφού αναβοσβήσει 5 δευτερόλεπτα σημαίνει ότι η επιλεγμένη θερμοκρασία έχει οριστεί.

3.3 Λειτουργία

Πατώντας το κουμπί διαδοχικά, η κατάσταση λειτουργίας του ψυγείου αλλάζει κυκλικά σε "Λειτουργία ECO – Λειτουργία Holiday – Λειτουργία Super – Λειτουργία που καθορίζεται από τον χρήστη". Αν αναβοσβήσει 5 δευτερόλεπτα σημαίνει ότι η επιλεγμένη θερμοκρασία έχει οριστεί.

3.4 Ηχητικό σήμα

Σύντομο ηχητικό σήμα θα ακουστεί μετά από κάθε πάτημα του κουμπιού.
Όλα τα κουμπιά λειτουργούν εφόσον δεν είναι ενεργοποιημένο το κλειδωμα.

3.5 Κλειδωμα / Ξεκλειδωμα

Πατήστε το κουμπί MODE και κρατήστε το για 3 δευτερόλεπτα για να κλειδώσετε τα άλλα 2 κουμπιά. Η ένδειξη κλειδώματος LOCK θα εμφανιστεί μετά από ένα ηχητικό σήμα.

Για να ξεκλειδώσετε, πιέστε το κουμπί MODE και κρατήστε για 3 δευτερόλεπτα. Η ένδειξη κλειδώματος LOCK θα σβήσει μετά από ένα ηχητικό σήμα. Σε κατάσταση ξεκλειδώματος, όλα τα κουμπιά είναι διαθέσιμα.

Αν δεν υπάρξει κάποια χρήση/λειτουργία μέσα σε 25 δευτερόλεπτα, η οθόνη θα κλειδώσει αυτόματα. Πατήστε παρατεταμένα το κουμπί "MODE" για να ξεκλειδώσετε την οθόνη.

Πίνακας ελέγχου

4.0 Λειτουργία Eco

Πατήστε το κουμπί mode ώστε να επιλέξετε την λειτουργία Eco για περισσότερη οικονομία. Αφού κάνετε την επιλογή σας το κουμπί θα αναβοσβήσει για 5 δευτερόλεπτα κάτι που σημαίνει ότι η επιλογή σας έχει καταχωρηθεί. Θερμοκρασία ψυγείου κατά την συγκεκριμένη λειτουργία: 5°C. Θερμοκρασία καταψύκτη κατά την συγκεκριμένη λειτουργία:-18 °C.

4.1. Holiday Mode

Πατήστε το κουμπί mode ώστε να επιλέξετε την λειτουργία διακοπών Holiday Mode. Αφού κάνετε την επιλογή σας το κουμπί θα αναβοσβήσει για 5 δευτερόλεπτα κάτι που σημαίνει ότι η επιλογή σας έχει καταχωρηθεί. Η θερμοκρασία είναι καθορισμένη στους 17°C, ενώ το εικονίδιο Holiday θα αναβοσβήσει 3 φορές και θα συνοδεύεται με ηχητικό σήμα.

Έξοδος από την κατάσταση διακοπών: επιλέξτε το κουμπί Mode, κλείστε τη λειτουργία διακοπών και αφού περάσουν 5 δευτερόλεπτα και κατοχυρωθεί η επιλογή σας, εισάγετε την επιθυμητή λειτουργία.

4.2. Super Freezing Mode

Πατήστε το κουμπί mode ώστε να επιλέξετε την λειτουργία Super Freezing Mode. Αφού κάνετε την επιλογή σας το κουμπί θα αναβοσβήσει για 5 δευτερόλεπτα κάτι που σημαίνει ότι η επιλογή σας έχει καταχωρηθεί. Η θερμοκρασία δεν μπορεί να ρυθμιστεί στο τμήμα του καταψύκτη, ενώ το συγκεκριμένο εικονίδιο θα αναβοσβήσει 3 φορές και θα συνοδεύεται με ηχητικό σήμα.

Έξοδος από τη λειτουργία κατάψυξης μπορεί να γίνει με 2 τρόπους:

-Χειροκίνητη έξοδος από το Freezing mode

-Η περίοδος ψύξης να ξεπερνάει τις 50 ώρες.

Το ψυγείο επανέρχεται στην προηγούμενη λειτουργία από τη ρύθμιση Freezing Mode.

5.0 Συναγερμός για την ανοιχτή πόρτα

Αν το ψυγείο (επάνω πόρτα) παραμένει ανοιχτό για 90 δευτερόλεπτα, θα ξεκινήσει περιοδικός συναγερμός μέχρι να κλείσει η πόρτα.

Καθημερινή Χρήση

Καθαρισμός του εσωτερικού

Πριν χρησιμοποιήσετε τη συσκευή για πρώτη φορά, πλύνετε το εσωτερικό και όλα τα εσωτερικά εξαρτήματα με χλιαρό νερό και κάποιο ουδέτερο σαπούνι, ώστε να απομακρυνθεί η χαρακτηριστική μυρωδιά του ολοκαίνουργιου προϊόντος, και στη συνέχεια, στεγνώστε καλά.

Σημαντικό! Μην χρησιμοποιείτε απορρυπαντικά ή χημικά καθαριστικά, καθώς θα καταστρέψουν την επιφάνεια της συσκευής.

Κατάψυξη νωπών τροφίμων

Η κατάψυξη είναι κατάλληλη για την κατάψυξη νωπών τροφίμων και την αποθήκευση κατεψυγμένων και βαθείας κατάψυξης τροφίμων για μεγάλο χρονικό διάστημα.

Τοποθετήστε τα φρέσκα τρόφιμα που πρέπει να καταψυχθούν στην κατάψυξη.

Η μέγιστη ποσότητα τροφίμων που μπορεί να καταψυχθεί σε 24 ώρες καθορίζεται στην πινακίδα του ψυγείου.

Η διαδικασία κατάψυξης διαρκεί 24 ώρες: κατά τη διάρκεια αυτής της περιόδου μην προσθέτετε άλλα τρόφιμα να καταψυχθούν.

Αποθήκευση κατεψυγμένων τροφίμων

Κατά την πρώτη εκκίνηση ή μετά από μια περίοδο εκτός λειτουργίας, πριν από την τοποθέτηση τροφίμων στο ψυγείο αφήστε τη συσκευή να λειτουργήσει τουλάχιστον 2 ώρες στις υψηλότερες ρυθμίσεις.

Σημαντικό! Σε περίπτωση λανθασμένης απόψυξης, για παράδειγμα, σε περίπτωση διακοπής ρεύματος, τα αποψυγμένα τρόφιμα πρέπει να καταναλώνονται γρήγορα ή να μαγειρευτούν αμέσως και στη συνέχεια να καταψυχθούν εκ νέου (μετά το ψήσιμο)

Ξεπάγωμα

Βαθιά-κατεψυγμένα ή κατεψυγμένα τρόφιμα, πριν να χρησιμοποιηθούν, μπορεί να αποψυχθούν στο ψυγείο

ή σε θερμοκρασία δωματίου, ανάλογα με το διαθέσιμο χρόνο για αυτή τη λειτουργία.

Μικρά κομμάτια μπορεί ακόμη και να μαγειρευτούν ακόμη κατεψυγμένα, κατευθείαν από την κατάψυξη. Σε αυτήν την περίπτωση, το μαγείρεμα θα διαρκέσει περισσότερο.

Χρήσιμες συμβουλές

Για να σας βοηθήσουμε να αξιοποιήσετε την κατάψυξη πιο αποδοτικά, σας προτείνουμε:

Καθημερινή Χρήση

- η μέγιστη ποσότητα τροφίμων που μπορεί να καταψυχθεί σε 24 ώρες. εμφανίζεται στην πινακίδα στο πίσω μέρος του ψυγείου;
- η διαδικασία κατάψυξης διαρκεί 24 ώρες. Καμία περαιτέρω τροφή δεν πρέπει να προστεθεί για να καταψυχθεί κατά τη διάρκεια αυτής της περιόδου;
- Καταψύχετε μόνο τρόφιμα καθαρισμένα και υψηλής ποιότητας;
- Ετοιμάζετε τα τρόφιμα σε μικρές μερίδες για να παγώνουν γρήγορα και πλήρως και να μπορείτε να ξεπαγώνετε μόνο την ποσότητα που θέλετε;
- Τυλίξτε τα τρόφιμα σε αλουμινόχαρτο ή πολυαιθυλένιο και βεβαιωθείτε ότι τα πακέτα είναι αεροστεγή;
- Μην αφήνετε τα φρέσκα, νωπά τρόφιμα να έρθουν σε επαφή με τρόφιμα που είναι ήδη παγωμένα, για να μην ανέβει η θερμοκρασία τους;
- Τα άπαχα τρόφιμα διατηρούνται καλύτερα και περισσότερο από αυτά με λιπαρά, το αλάτι μειώνει το χρόνο κατάψυξης των τροφίμων;
- Μην πίνετε νερό απευθείας από την κατάψυξη, σε περίπτωση που τοποθετήσετε κάποιο μπουκάλι για να παγώσει, αφαιρέστε το πώμα.
- Κατά την αφαίρεση τροφίμων από τον καταψύκτη, προσέχετε για την αποφυγή εγκαυμάτων στο δέρμα.
- Συστήνεται να σημειώνετε την ημερομηνία αποθήκευσης σε κάθε συσκευασία, ώστε να γνωρίζετε τη διάρκεια κατάψυξης των τροφίμων.

Συμβουλές για την αποθήκευση των κατεψυγμένων τροφίμων

- Για την καλύτερη απόδοση της συσκευής:
 - βεβαιωθείτε ότι τα συσκευασμένα τρόφιμα αποθηκεύτηκαν με ασφάλεια από τον λιανοπωλητή;
 - βεβαιωθείτε ότι τα κατεψυγμένα τρόφιμα μεταφέρθηκαν από το κατάστημα τροφίμων στον καταψύκτη στο συντομότερο δυνατό χρονικό διάστημα;
 - μην ανοίγετε συχνά την πόρτα και μην την αφήνετε ανοιχτή για περισσότερο από όσο χρειάζεται.
- αφού ξεπαγώσουν, τα τρόφιμα πρέπει να καταναλωθούν άμεσα και δεν μπορούν να καταψυχθούν ξανά;
- μην καταψύχετε τα τρόφιμα για περισσότερο από τη διάρκεια που αναγράφεται στη συσκευασία.

Συμβουλές για την συντήρηση νωπών τροφίμων

Για την καλύτερη απόδοση της συσκευής:

- Μην αποθηκεύετε το φαγητό ζεστό ή υγρά που εξατμίζονται στο ψυγείο
- Να σκεπάζετε ή να τυλίγετε τα τρόφιμα, ιδιαίτερα αν έχουν έντονο άρωμα

Συμβουλές για ψύξη

Χρήσιμες συμβουλές

- Για ασφάλεια, συντηρείτε τα νωπά τρόφιμα για λίγες μόνο ημέρες.
- Το μαγειρεμένο φαγητό πρέπει να συσκευάζεται πριν τοποθετηθεί στο ψυγείο.
- Τρόφιμα και λαχανικά: τοποθετήστε τα στο συρτάρι φρούτων και λαχανικών, πλύντε τα πριν τα καταναλώσετε.

Καθημερινή Χρήση

Συμβουλές για ψύξη

Χρήσιμες συμβουλές:


- Τυλίξτε τα τρόφιμα σε ειδικές σακούλες και τοποθετήστε σε γυάλινα ράφια πάνω από το καλάθι των φρούτων.
- Για ασφάλεια, αποθηκεύστε με αυτόν τον τρόπο για μια ή δυο ημέρες το πολύ.
- Μαγειρεμένα φαγητά, κρύα πιάτα, κλπ: πρέπει να καλύπτονται και να τοποθετούνται σε οποιοδήποτε ράφι.
- Φρούτα και Λαχανικά: θα πρέπει να καθαρίζονται καλά και να τοποθετούνται σε ειδικό(ά) συρτάρι(α) που παρέχονται.
- Βούτυρο και τυρί: πρέπει να τοποθετούνται σε ειδικές αεροστεγείς συσκευασίες ή να τυλιγούνται σε αλουμινόχαρτο ή σε σακούλες από πολυαιθυλένιο για να υπάρχει όσο λιγότερος αέρας γίνεται.
- Μπουκάλι γάλα: πρέπει να έχουν καπάκι και να αποθηκεύονται στα ράφια της πόρτας.
- Μπανάνες, πατάτες, κρεμμύδια και σκόρδο, αν δεν είναι συσκευασμένα, δεν πρέπει να φυλάσσονται στο ψυγείο.

Έλεγχος Θερμοκρασίας Fresh Zone

- Η θερμοκρασία του fresh zone μπορεί να οριστεί ανάλογα με τον τύπο της τροφής αποθήκευσης.
- Σύρετε το κουμπί από κάτω προς τα πάνω και η θερμοκρασία στο συρτάρι fresh zone θα μειωθεί σταδιακά.
- Όταν το κουμπί τοποθετείται στην θέση "CRISPER", το συρτάρι fresh zone μπορεί να λειτουργήσει κανονικά και να διατηρήσει την κατάλληλη θερμοκρασία και υγρασία για τα φρούτα και τα λαχανικά.
- Όταν το κουμπί τοποθετείται στη θέση "CHILLER", είναι κατάλληλο για βραχυπρόθεσμη αποθήκευση ψαριών ή άλλων φρέσκων τροφίμων. Το φαγητό θα διατηρηθεί φρέσκο αλλά όχι κατεψυγμένο το οποίο είναι το καλύτερο για την αποθήκευση φρέσκων τροφίμων.
- Συμβουλές: Όταν επιλέγετε τη λειτουργία "CHILLER", συνιστάται να ορίσετε τη θερμοκρασία του ψυγείου κάτω των 4°C και ο χρόνος που θα μείνουν να μην είναι περισσότερος από 3 ημέρες, προκειμένου να διατηρηθεί η καλύτερη φρεσκάδα.



CHILLER



CRISPER

Καθημερινή Χρήση

Καθαρισμός

Για λόγους υγιεινής το εσωτερικό της συσκευής, συμπεριλαμβανομένων των εσωτερικών εξαρτημάτων, θα πρέπει να καθαρίζονται τακτικά.



Προσοχή! Η συσκευή δεν πρέπει να συνδεθεί με το ρεύμα κατά τη διάρκεια του καθαρισμού. Κίνδυνος ηλεκτροπληξίας! Πριν τον καθαρισμό σβήστε τη συσκευή και αφαιρέστε το φως από την πρίζα, ή απενεργοποιήστε τη για ασφάλεια. Ποτέ μην καθαρίζετε τη συσκευή με ατμοκαθαριστή. Η υγρασία μπορεί να συσσωρευτεί στα ηλεκτρικά εξαρτήματα, με κίνδυνο ηλεκτροπληξίας! Οι ατμοί μπορεί να καταστρέψουν τα πλαστικά εξαρτήματα. Η συσκευή πρέπει να είναι στεγνή πριν τεθεί και πάλι σε λειτουργία.

Σημαντικό! Αιθέρια έλαια και οργανικοί διαλύτες μπορούν να προσβάλλουν πλαστικά μέρη, π.χ. χυμός λεμονιού ή χυμός από φλούδα πορτοκαλιού, βουτυρικό οξύ, καθαριστικά που περιέχουν οξικό οξύ.

Μην επιτρέπτε σε τέτοιες ουσίες να έρθουν σε επαφή με τα εξαρτήματα της συσκευής. Μην χρησιμοποιείτε λειαντικά καθαριστικά

Αφαιρέστε το φαγητό από την καταψύκτη. Αποθηκεύστε τα σε δροσερό μέρος, καλά καλυμμένο.

Απενεργοποιήστε τη συσκευή και αφαιρέστε το φως από το ρεύμα ή απενεργοποιήστε τον ασφαλειοδιακόπτη.

Καθαρίστε τη συσκευή και τα εσωτερικά αξεσουάρ με ένα πανί και χλιαρό νερό. Μετά τον καθαρισμό σκουπίστε με φρέσκο νερό και τρίψτε το στεγνό.

Αφού έχετε στεγνώσει όλα τα μέρη βάλτε τη συσκευή ξανά σε λειτουργία.

Καθημερινή Χρήση

Αντικατάσταση της λάμπας

Το εσωτερικό φως είναι τεχνολογίας LED. Για να αντικαταστήσετε την λάμπα, επικοινωνήστε με έναν εξειδικευμένο τεχνικό της Serviceworld στο 210- 6203838.

Οδηγός αντιμετώπισης προβλημάτων



Προσοχή! Πριν από την αντιμετώπιση προβλημάτων, αποσυνδέστε την παροχή ρεύματος. Μόνο εξουσιοδοτημένος τεχνικός της Serviceworld πρέπει να κάνει επισκευές προβλημάτων που δεν είναι σε αυτό το εγχειρίδιο.

Σημαντικό! Κάποιοι ήχοι που μπορεί να ακούγονται κατά τη λειτουργία της συσκευής είναι φυσιολογικοί (συμπίεσής, κυκλοφορία ψυκτικού υγρού).

Πρόβλημα	Πιθανό αίτιο	Επίλυση
Η συσκευή δεν λειτουργεί.	Η συσκευή δεν είναι καλά τοποθετημένη στο ρεύμα.	Βάλτε την στην πρίζα.
	Έχει καεί η ασφάλεια.	Αλλάξτε ασφάλεια.
	Η πρίζα είναι χαλασμένη.	Καλέστε ηλεκτρολόγο.
Η συσκευή παγώνει υπερβολικά.	Η θερμοκρασία έχει ρυθμιστεί πολύ χαμηλά ή είναι ενεργοποιημένη η λειτουργία Super Freezing Mode.	Γυρίστε το θερμοστάτη σε υψηλότερη ρύθμιση.
Το φαγητό είναι ζεστό.	Η θερμοκρασία δεν είναι σωστά ρυθμισμένη.	Διαβάστε τις οδηγίες χρήσεως.
	Η πόρτα έμεινε ανοιχτή για μεγάλο χρονικό διάστημα.	Ανοίξτε την πόρτα μόνο όσο χρειάζεται.
	Μεγάλη ποσότητα ζεστού φαγητού τοποθετήθηκε στο ψυγείο πρόσφατα.	Γυρίστε τον θερμοστάτη σε υψηλότερη ρύθμιση.
	Η συσκευή βρίσκεται κοντά σε πηγή θερμότητας.	Ακολουθήστε τις οδηγίες εγκατάστασης.
Συσσώρευση πάγου στο σημείο που κλείνει η πόρτα.	Το λάστιχο πόρτας δεν κλείνει αεροστεγώς.	Χρησιμοποιώντας ένα στεγνωτήρα μαλλιών (σε δροσερή θερμοκρασία) λιώστε τον πάγο. Ταυτόχρονα, διαμορφώστε το σημείο που κλείνει η πόρτα με το χέρι έτσι ώστε να κλείνει σωστά.
Περίεργοι θόρυβοι.	Η συσκευή δεν είναι ευθυγραμμισμένη.	Ρυθμίστε τα ποδαράκια στήριξης.
	Η συσκευή ακουμπάει τον τοίχο ή άλλα αντικείμενα.	Μετακινήστε ελαφρά την συσκευή.
	Κάποιο σωληνάκι στο πίσω μέρος ακουμπάει μέρος της συσκευής ή τον τοίχο.	Ρυθμίστε το με το χέρι αν χρειαστεί.

Εάν το πρόβλημα συνεχίζεται επικοινωνήστε με το εξουσιοδοτημένο κέντρο τεχνικής υποστήριξης. 210-620.38.38.



User Instruction

Combi Fridge Freezer No-Frost

Content	
1. Safety Information	Page 1~9
2. Overview	Page 10
3. Installation	Page 11~18
4. User interface	Page 19~21
5. Daily Use	Page 22~25

In the interest of your safety and to ensure the correct use, before installing and first using the appliance, read this user manual carefully, including its hints and warnings. To avoid unnecessary mistakes and accidents, it is important to ensure that all people using the appliance are thoroughly familiar with its operation and safety features. Save these instructions and make sure that they remain with the appliance if it is moved or sold, so that everyone using it through its life will be properly informed on appliance use and safety.

For the safety of life and property keep the precautions of these user's instructions as the manufacturer is not responsible for damages caused by omission.

Children and vulnerable people safety

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children aged from 3 to 8 years are allowed to load and unload this appliance.
- Children should be supervised to ensure that they do not play with the appliance.
- Cleaning and user maintenance shall not be made by children unless they are aged from 8 years and above and supervised.
- Keep all packaging well away from children. There is risk of suffocation.

- If you are discarding the appliance pull the plug out of the socket, cut the connection cable (as close to the appliance as you can) and remove the door to prevent playing children to suffer electric shock or to close themselves into it.
- If this appliance featuring magnetic door seals is to replace an older appliance having a spring lock (latch) on the door or lid, be sure to make that spring lock unusable before you discard the old appliance. This will prevent it from becoming a death trap for a child.

General safety

 **WARNING!** Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.

 **WARNING!** Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.

 **WARNING!** Do not damage the refrigerant circuit.

 **WARNING!** Do not use other electrical appliances (such as ice cream makers) inside of refrigerating appliances, unless they are approved for this purpose by the manufacture.

 **WARNING!** Do not touch the light bulb if it has been on for a long period of time because it could be very hot.¹⁾

¹⁾ If there is a light in the compartment.

 **WARNING!** When positioning the appliance, ensure the supply cord is not trapped or damaged.

 **WARNING!** Do not locate multiple portable socket-outlets or portable power suppliers at the rear of the appliance.

- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- The refrigerant isobutane (R-600a) is contained within the refrigerant circuit of the appliance, a natural gas with a high level of environmental compatibility, which is nevertheless flammable.
- During transportation and installation of the appliance, be certain that none of the components of the refrigerant circuit become damaged.
 - avoid open flames and sources of ignition
 - thoroughly ventilate the room in which the appliance is situated
- It is dangerous to alter the specifications or modify this product in any way. Any damage to the cord may cause a short circuit, fire and/or electric shock.
- This appliance is intended to be used in household and similar applications such as
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses and by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments;
 - catering and similar non-retail applications.

 **WARNING!** Any electrical components (plug, power cord, compressor and etc.) must be replaced by a certified service agent or qualified service personnel.

 **WARNING!** The light bulb supplied with this appliance is a “special use lamp bulb” usable only with the appliance supplied. This “special use lamp” is not usable for domestic lighting.¹⁾

- Power cord must not be lengthened.
- Make sure that the power plug is not squashed or damaged by the back of the appliance. A squashed or damaged power plug may overheat and cause a fire.
- Make sure that you can come to the mains plug of the appliance.
- Do not pull the mains cable.
- If the power plug socket is loose, do not insert the power plug. There is a risk of electric shock or fire.
- You must not operate the appliance without the lamp.
- This appliance is heavy. Care should be taken when moving it.
- Do not remove nor touch items from the freezer compartment if you hands are damp/wet, as this could cause skin abrasions or frost/freezer burns.
- Avoid prolonged exposure of the appliance to direct sunlight.

Daily use

- Do not put hot on the plastic parts in the appliance.
- Do not place food products directly against the rear wall.

1) If there is a light in the compartment.

- Frozen food must not be re-frozen once it has been thawed out.¹⁾
- Store pre-packed frozen food in accordance with the frozen food manufacturer's instructions.¹⁾
- Appliance's manufacturer's storage recommendations should be strictly adhered to. Refer to relevant instructions.
- Do not place carbonated or fizzy drinks in the freezer compartment as it creates pressure on the container, which may cause it to explode, resulting in damage to the appliance.¹⁾
- Ice lollies can cause frost burns if consumed straight from the appliance.¹⁾
- To avoid contamination of food, please respect the following instructions
- Opening the door for long periods can cause a significant increase of the temperature in the compartments of the appliance.
- Clean regularly surfaces that can come in contact with food and accessible drainage systems.
- Clean water tanks if they have not been used for 48h; flush the water system connected to a water supply if water has not been drawn for 5 days.
- Store raw meat and fish in suitable containers in the refrigerator, so that it is not in contact with or drip onto other food.
- Two-star frozen-food compartments (if they are presented in the appliance) are suitable for storing pre-frozen food, storing or making ice-cream and making ice cubes.

1) If there is a freezer compartment.

2) If there is a fresh-food storage compartment.

- One-, two- and three -star compartments (if they are presented in the appliance) are not suitable for the freezing of fresh food.
- If the appliance is left empty for long periods, switch off, defrost, clean, dry and leave the door open to prevent mould developing within the appliance.

Care and cleaning

- Before maintenance, switch off the appliance and disconnect the mains plug from the mains socket.
- Do not clean the appliance with metal objects.
- Do not use sharp objects to remove frost from the appliance. Use a plastic scraper.¹⁾
- Regularly examine the drain in the refrigerator for defrosted water. If necessary, clean the drain.
If the drain is blocked, water will collect in the bottom of the appliance.²⁾

Installation

Important! For electrical connection carefully follow the instructions given in specific paragraphs.

- Unpack the appliance and check if there are damages on it. Do not connect the appliance if it is damaged. Report possible damages immediately to the place you bought it. In that case retain packing.

1) If there is a freezer compartment.

2) If there is a fresh-food storage compartment.

- It is advisable to wait at least four hours before connecting the appliance to allow the oil to flow back in the compressor.
- Adequate air circulation should be around the appliance, lacking this leads to overheating. To achieve sufficient ventilation follow the instructions relevant to installation.
- Wherever possible the spacers of the product should be against a wall to avoid touching or catching warm parts (compressor, con-denser) to prevent possible burn.
- The appliance must not be located close to radiators or cookers.
- Make sure that the mains plug is accessible after the installation of the appliance.

Service

- Any electrical work required to do the servicing of the appliance should be carried out by a qualified electrician or competent person.
- This product must be serviced by an authorized Service Center, and only genuine spare parts must be used.

Energy saving

- Don't put hot food in the appliance;
- Don't pack food close together as this prevents air circulating;
- Make sure food don't touch the back of the compartment(s);

- If electricity goes off, don't open the door(s);
- Don't open the door(s) frequently;
- Don't keep the door(s) open for too long time;
- Don't set the thermostat on exceeding cold temperatures;
- All accessories, such as drawers, shelves balconies, should be kept there for lower energy consumption.

Environment Protection

 This appliance does not contain gasses which could damage the ozone layer, in either its refrigerant circuit or insulation materials. The appliance shall not be discarded together with the urban refuse and rubbish. The insulation foam contains flammable gases: the appliance shall be disposed according to the appliance regulations to obtain from your local authorities. Avoid damaging the cooling unit, especially the heat exchanger. The materials used on this appliance marked by the symbol  are recyclable.



The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health,

which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local council, your household waste disposal service or the shop where you purchased the product.

Packaging materials

The materials with the symbol are recyclable. Dispose the packaging in a suitable collection containers to recycle it.

Disposal of the appliance

1. Disconnect the mains plug from the mains socket.
2. Cut off the mains cable and discard it.




WARNING! During using, service and disposal the appliance, please pay attention to symbol similar as left side, which is located on rear of appliance (rear panel or compressor) and with yellow or orange color.

It's risk of fire warning symbol. There are flammable materials in refrigerant pipes and compressor.

Please be far away fire source during using, service and disposal.

Overview

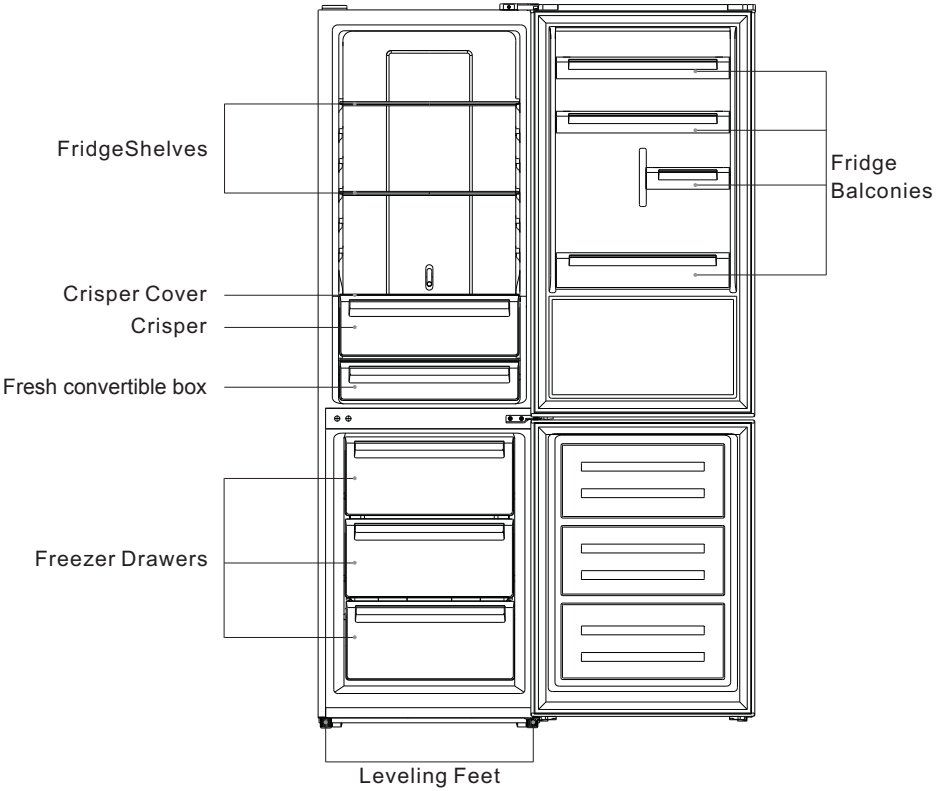

Note: Above picture is for reference only. Real appliance probably is different.

Installation

Space Requirement

- Select a location without direct exposure to sunlight;
- Select a location with enough space for the refrigerator doors to open easily;
- Select a location with level (or nearly level) flooring;
- Allow sufficient space to install the refrigerator on a flat surface;
- Allow clearance to the right, left, back and top when installing. This will help reduce power consumption and keep your energy bills lower.
- Keep at least 50mm gap at two sides and back.

Positioning

Install this appliance at a location where the ambient temperature corresponds to the climate class indicated on the rating plate of the appliance:

for refrigerating appliances with climate class:

- extended temperate: this refrigerating appliance is intended to be used at ambient temperatures ranging from 10 °C to 32 °C;(SN)
- temperate: this refrigerating appliance is intended to be used at ambient temperatures ranging from 16 °C to 32 °C;(N)
- subtropical: this refrigerating appliance is intended to be used at ambient temperatures ranging from 16 °C to 38 °C;(ST)
- tropical: this refrigerating appliance is intended to be used at ambient temperatures ranging from 16 °C to 43 °C;(T)

Location

The appliance should be installed well away from sources of heat such as radiators, boilers, direct sunlight etc. Ensure that air can circulate freely around the back of the cabinet. To ensure best performance, if the appliance is positioned below an overhanging wall unit, the minimum distance between the top of the cabinet and the wall unit must be at least 50 mm. Ideally, however, the appliance should not be positioned below overhanging wall units. Accurate leveling is ensured by one or more adjustable feet at the base of the cabinet.

This refrigerating appliance is not intended to be used as a built-in appliance.

 **Warning!** It must be possible to disconnect the appliance from the mains power supply; the plug must therefore be easily accessible after installation.

Electrical connection


Before plugging in, ensure that the voltage and frequency shown on the rating plate correspond to your domestic power supply. The appliance must be earthed. The power supply cable plug is provided with a contact for this purpose. If the domestic power supply socket is not earthed, connect the appliance to a separate earth in compliance with current regulations, consulting a qualified electrician. The manufacturer declines all responsibility if the above safety precautions are not observed. This appliance complies with the E.E.C. Directives.

Installation


Door Reversibility

Before reversing the door, please be prepared below tools and material: straight screwdriver, cross screwdriver, spanner and the components included in the poly bag:


Left Door Hinge Cover x 1





Left Aid-Closer on Upper Door x 1




Left Aid-Closer on Lower Door x 1





1. Unscrew top hinge cover and disconnect connectors of door switch and harness.

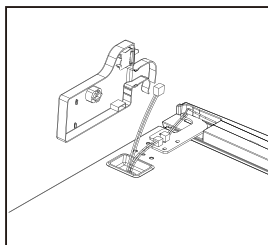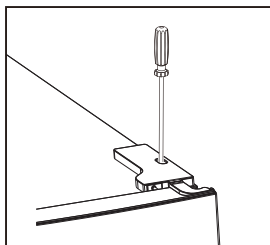

2. Unscrew top hinge


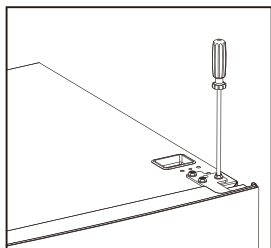


3. Remove the pin with a screwdriver and flip the hinge bracket. Then refit the pin to hinge bracket

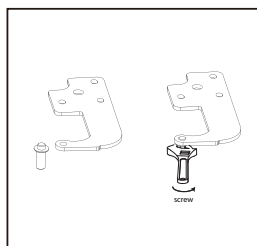
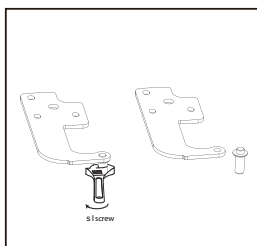


Installation




4. Move door switch from right hinge cover to left hinge cover in accessory bag.

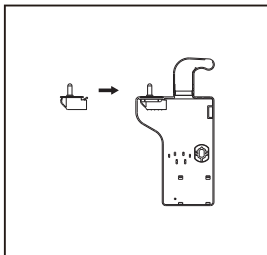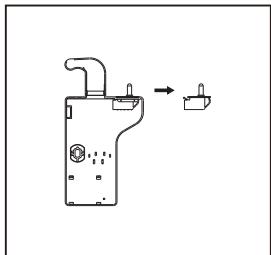


5. Detach cover in top of upper door and move harness from right side to left side, then replace the cover.

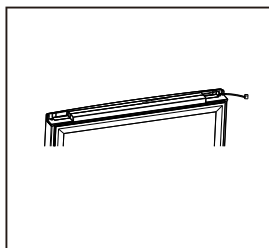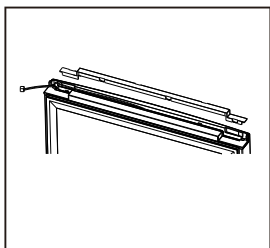

6. Move top left cover to right side

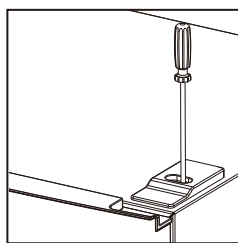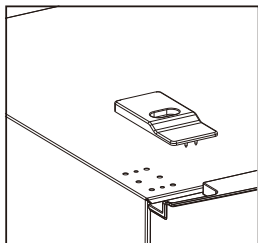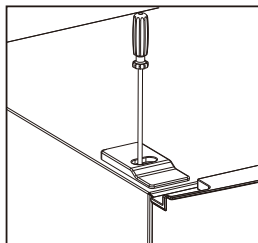


7. Take off the upper door, take out the screw from the middle hinge by cross screwdriver, then take off the lower door.


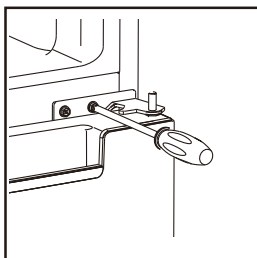


Installation



8. Move the hinge hole covers from left side to right side.

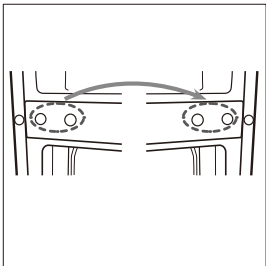

9. Unscrew bottom hinge. Then remove the adjustable feet from both side.

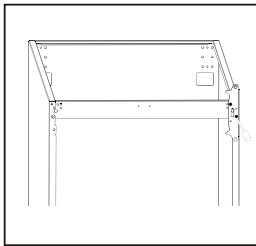
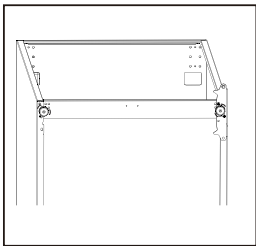


10. Unscrew and remove the bottom hinge pin, turn the bracket over and replace it.

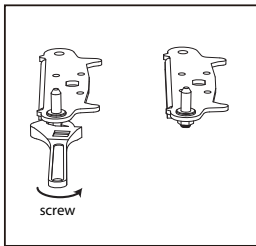
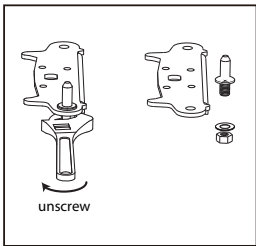


Installation


11.Refit the bracket fitting the bottom hinge pin. Replace both adjustable feet.

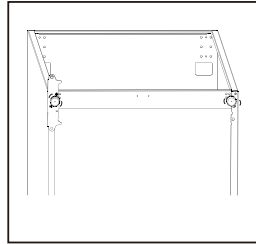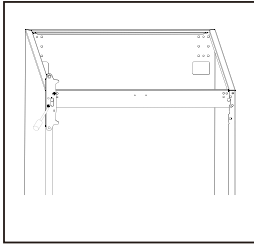

12.Remove aid-closers from bottom of upper and lower doors, then take new aid-closers from accessory bag and install them to left side.

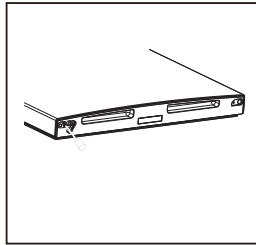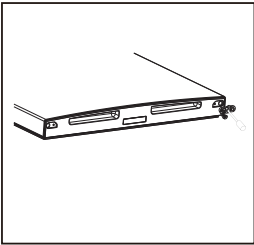


13.Detach the Fridge and the Freezer door gaskets and then attach them after rotating.

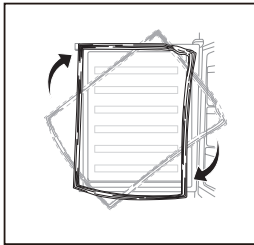


Installation



14. Install the lower door, adjust and fix the middle hinge onto the cabinet.

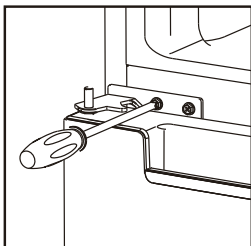

15. Replace upper door, please ensure the door align with the cabinet to make sure door gasket seal the cabinet tightly. Then connect door with cabinet by tightly fixed top hinge.

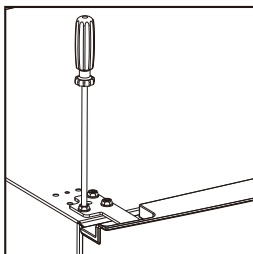


16. Connect harnesses from door and cabinet. Then replace top hinge cover. Before screw the cover, connect terminals of door switch.

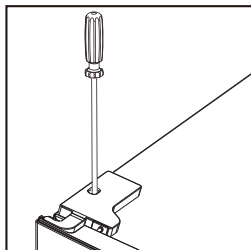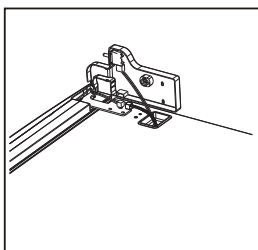



Installation

Install door external handle (if external handle is present)

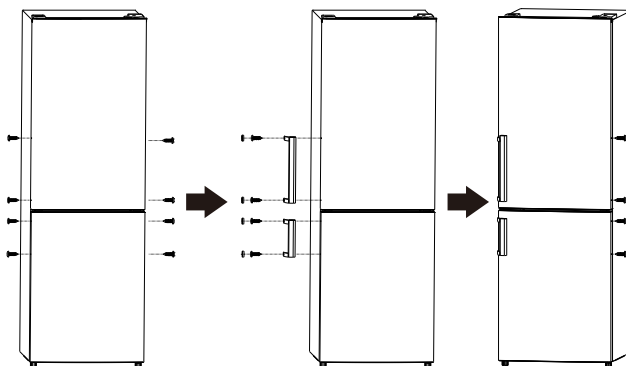

Space Requirement

- Keep enough space of door open.
- Keep at least 50mm gap at two sides and back.

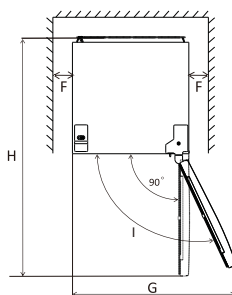
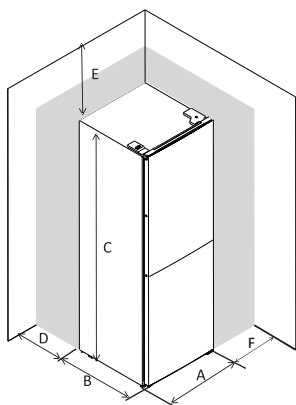


	FN2-451
A	600
B	685
C	1850
D	min=50
E	min=50
F	min=50
G	1200
H	1285
I	135°

Levelling the unit


To do this adjust the two levelling feet at front of the unit.

If the unit is not level, the doors and magnetic seal alignments will not be covered properly.

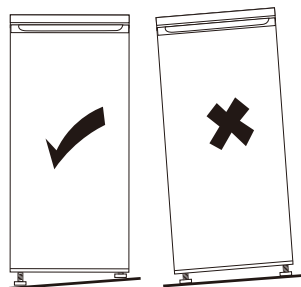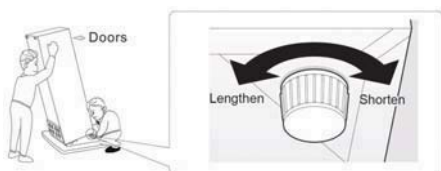

User interface

Using the Control Panel

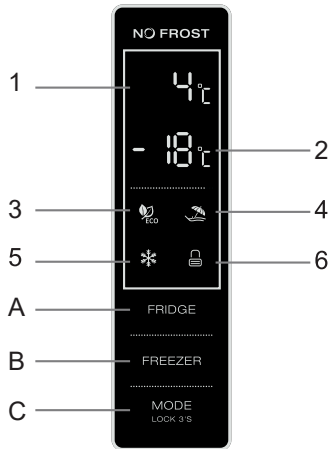

1.1 Key Operation (A & B & C)

FRIDGE : Temperature control of fridge compartment
This key is available in user defined mode and SUPER mode, not available in ECO mode and VACATION mode.
Short touching this key to select fridge temperature.

FREEZER : Temperature control of freezer compartment
This key is available in user defined mode and VACATION mode, not available in SUPER mode and ECO mode.
Short touching this key to select freezer temperature.

MODE LOCK 3'S : Running mode select / Locking / Unlocking
Keep touching this key for 3s to lock or unlock the control panel.
In "Unlocking" status, short touching this key to select running mode (ECO mode / VACATION mode / SUPER mode / user defined mode).

1.2 Display (1 & 2)

- 1) Setting temperature display of fridge compartment
This area will display setting temperature of fridge compartment.
If E0,E1,E2,E3,E5 displays in this area, please call service.
- 2) Setting temperature display of freezer compartment
This area will display setting temperature of freezer compartment.

1.3 Indicators (3 & 4 & 5 & 6)

- 3) ECO mode indicator
This light is on when ECO mode is selected.
- 4) VACATION mode indicator
This light is on when VACATION mode is selected.
- 5) SUPER mode indicator
This light is on when SUPER mode is selected.
- 6) Locking / Unlocking indicator
This light is on when control panel is locked.

User interface

2. Illustion of the key

2.1 Operation and display

- Control panel will be 100% lit up for 3s, which operates exactly as per the setting before the power off. After that,operations are available.
- Before your operation, make sure the conrol panel is in unlocking status.
- In locking status, locking indicator will flash for 3s when you short touching any operation key, but operations are not available.
- Control panel will be locked 25s after the last operation.
- Control panel will 100% light off 2 minutes after the last operation.
- Control panel will be lit up once the door of fridge compartment is opened.
- Control panel will be lit up once short touching operation keys.
- There will be a prompt beep for any key operation.

2.2 Temperature setting of fridge compartment

- In user defined mode or SUPER mode, short touc **FRIDGE** key consecutively, setting temperature of firdge compartment will display in a circle from 2 C to 8 C .
- Setting temperature will be confirmed after 5s of flashing of the indicator.

2.3 Temperature setting of freezer compartment

- In user defined mode, short touching **FREEZER** consecutively, setting temperature of firdge compartment will display in a circle from -14 C to -22 C .
- Setting temperature will be confirmed after 5s of flashing of the indicator.


2.4 Temperature setting recommendation

Temperature setting recommendation		
Environment Temperature	Fridge Compartment	Freezer Compartment
Summer		
Normal		
Winter		

User interface

2.5 Temperature control of fresh zone

- Temperature of the fresh can be adjusted according to the type of storage food.
- Push the knob upward from the bottom, temperature in the fresh zone will be gradually decreased.
- When the knob is placed at the "CRISPER" position, the fresh zone can be functioned as a crisper zone and maintain the appropriate temperature and humidity for fruits and vegetable.
- When the knob is placed at the "FRESH" position, it is suitable for short-term storage of fish or other fresh food. The food will keep fresh but not frozen which makes it the best choice for storing fresh food.
- Tips: When you choose "FRESH" function, it is recommended to set the refrigerator temperature below 4°C . and preserved lead-time no more than 3 days , in order to keep the best freshness.

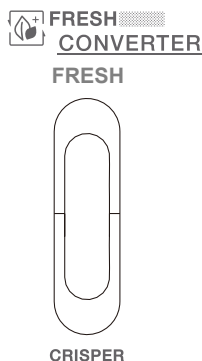

2.6 ECO mode

Activate ECO mode:

- Short touching **MODE LOCK F8** key consecutively, when  (ECO mode indicator) is lit up, ECO mode is selected.
- After 5s of flashing of ECO mode indicator, ECO mode will be activated.
- When ECO mode is activated, fridge / freezer temperature will be set automatically to 5°C / -18°C.
- In ECO mode, if you set fridge or freezer temperature by manual, ECO mode indicator will flash for 3s, fridge and freezer temperature setting operations are not workable.

Quit from ECO mode:

- Short touch **MODE LOCK F8** key, when ECO mode indicator is light off, the appliance quits from ECO mode.

User interface

2.7 VACATION mode

Activate VACATION mode:

- Short touching  key consecutively, when  (VACATION mode indicator) is lit up, VACATION mode is selected.
- After 5s of flashing of VACATION mode indicator, VACATION mode will be activated.
- When VACATION mode is activated, fridge temperature will be set automatically to 17 °C, setting temperature of freezer compartment is available.
- In VACATION mode, if you set fridge temperature by manual, VACATION mode indicator will flash for 3s, fridge temperature setting operation is not workable.

Quit from VACATION mode:

- Short touch  key, when VACATION mode indicator is light off, the appliance quits from mode.

2.8 SUPER mode

It is advisable to set SUPER mode 24 hours ahead, if lots of foods need to be frozen in one time.

Activate SUPER mode:

- Short touching  key consecutively, when  (SUPER mode indicator) is lit up, SUPER mode is selected.
- After 5s of flashing of SUPER mode indicator, SUPER mode will be activated.
- When SUPER mode is activated, freezer temperature will be set automatically to -25 °C, setting temperature of fridge compartment is available.
- In SUPER mode, if you set freezer temperature by manual, SUPER mode indicator will flash for 3s, freezer temperature setting operation is not workable.

Quit from SUPER mode:

- Short touch  key, when SUPER mode indicator is light off, the appliance quits from SUPER mode.

WARNING !!!

In SUPER mode, the appliance will keep running under heavy load, noise level will be slightly higher than normal condition.

2.9 User defined mode

- Short touch  key until ECO mode indicator / VACATION mode indicator / SUPER mode indicator are all light off, user defined mode is activated.
- In user defined mode, users can set fridge temperature and freezer temperature by manual.

2.10 Door opening alarm function

If fridge door keeps open for 60s, door opening alarm will arise.

Daily Use

First use

Cleaning the interior

Before using the appliance for the first time, wash the interior and all internal accessories with lukewarm water and some neutral soap so as to remove the typical smell of a brand new product, then dry thoroughly.

Important! Do not use detergents or abrasive powders, as these will damage the finish.

Daily use

Position different food in different compartments according to be below table

Refrigerator compartments	Type of food
Door or balconies of fridge compartment	• Foods with natural preservatives, such as jams,juices, drinks, condiments. • Do not store perishable foods.
Crisper drawer (salad drawer)	• Fruits, herbs and vegetables should be placed separately in the crisper bin. • Do not store bananas, onions, potatoes, garlic in the refrigerator.
Fridge shelf – middle	• Dairy products, eggs
Fridge shelf – top	• Foods that do not need cooking, such as ready-to-eat foods, deli meats, leftovers.
Freezer drawer(s)/shelf	• Foods for long-term storage. • Bottom drawer/shelf for raw meat, poultry, fish. • Middle drawer/shelf for frozen vegetables, chips. • Top drawer/shelf for ice cream, frozen fruit, frozen baked goods.

Freezing fresh food

- The freezer compartment is suitable for freezing fresh food and storing frozen and deep-frozen food for a long time.
- Place the fresh food to be frozen in the bottom compartment.
- The maximum amount of food that can be frozen in 24 hours is specified on the rating plate.
- The freezing process lasts 24 hours: during this period do not add other food to be frozen.

Storing frozen food

When first starting-up or after a period out of use. Before putting the product in the compartment let the appliance run at least 2 hours on the higher settings.

Important! In the event of accidental defrosting, for example the power has been off for longer than the value shown in the technical characteristics chart under "rising time", the defrosted food must be consumed quickly or cooked immediately and then re-frozen (after cooked).

Thawing


Deep-frozen or frozen food, prior to be used, can be thawed in the freezer compartment or at room temperature, depending on the time available for this operation.

Small pieces may even be cooked still frozen, directly from the freezer. In this case, cooking will take longer.

Daily Use


Accessories Movable shelves

The walls of the refrigerator are equipped with a series of runners so that the shelves can be positioned as desired.

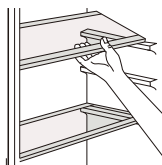


Positioning the door balconies

Door balconies can be disassembled for cleaning. To make the disassembling as follows: gradually pull the balcony in the direction of the arrows until it comes free, after cleaning, reposition it.

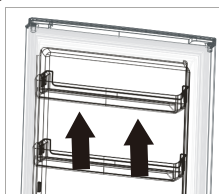

Disassemble the bottom drawer

- 1.Pull out the bottom drawer to stopper position.
- 2.Lift up the front of drawer.
- 3.Pull out the bottom drawer.

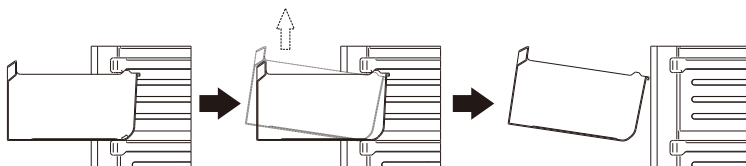

Helpful hints and tips

Hints for freezing

To help you make the most of the freezing process, here are some important hints:

- the maximum quantity of food which can be frozen in 24 hrs. is shown on the rating plate;
- the freezing process takes 24 hours. No further food to be frozen should be added during this period;
- only freeze top quality, fresh and thoroughly cleaned, foodstuffs;
- prepare food in small portions to enable it to be rapidly and completely frozen and to make it possible subsequently to thaw only the quantity required;
- wrap up the food in aluminium foil or polythene and make sure that the packages are airtight;
- do not allow fresh, unfrozen food to touch food which is already frozen, thus avoiding a rise in temperature of the latter;
- lean foods store better and longer than fatty ones; salt reduces the storage life of food;
- water ices, if consumed immediately after removal from the freezer compartment, can possibly cause the skin to be freeze burnt;
- it is advisable to show the freezing in date on each individual pack to enable you removal from the freezer compartment, can possibly cause the skin to be freeze burnt;
- it is advisable to show the freezing in date on each individual pack to enable you to keep tab of the storage time.

Daily Use

Hints for storage of frozen food

To obtain the best performance from this appliance, you should:
make sure that the commercially frozen foodstuffs were adequately stored by the retailer;
be sure that frozen foodstuffs are transferred from the food store to the freezer in the shortest possible time;

not open the door frequently or leave it open longer than absolutely necessary.

Once defrosted, food deteriorates rapidly and cannot be refrozen.

Do not exceed the storage period indicated by the food manufacture.

Hints for fresh food refrigeration

To obtain the best performance:

- Do not store warm food or evaporating liquids in the refrigerator
- Do cover or wrap the food, particularly if it has a strong flavour

Hints for refrigeration

Useful hints:

- Make (all types): wrap in polythene bags and place on the glass shelves above the vegetable drawer.
- For safety, store in this way only one or two days at the most.
- Cooked foods, cold dishes, etc....: these should be covered and may be placed on any shelf.
- Fruit and vegetables: these should be thoroughly cleaned and placed in the special drawer(s) provided.
- butter and cheese: these should be placed in special airtight containers or wrapped in aluminum foil or polythene bags to exclude as much air as possible.
- Milk bottle: these should have a cap and should be stored in the balconies on the door.
- Bananas, potatoes, onions and garlic, if not packed, must not be kept in the fridge.

Cleaning

For hygienic reasons the appliance interior, including interior accessories, should be cleaned regularly.



Caution! The appliance may not be connected to the mains during cleaning. Danger of electrical shock! Before cleaning switch the appliance off and remove the plug from the mains, or switch off or turn out the circuit breaker or fuse. Never clean the appliance with a steam cleaner. Moisture could accumulate in electrical components, danger of electrical shock! Hot vapors can lead to the damage of plastic parts. The appliance must be dry before it is placed back into service.

Important! Ethereal oils and organic solvents can attack plastic parts, e.g. lemon juice or the juice from orange peel, butyric acid, cleanser that contain acetic acid.

- Do not allow such substances to come into contact the appliance parts.
- Do not use any abrasive cleaners
- Remove the food from the freezer. Store them in a cool place, well covered.
- Switch the appliance off and remove the plug from the mains, or switch off or turn out the circuit breaker of fuse.
- Clean the appliance and the interior accessories with a cloth and lukewarm water. After cleaning wipe with fresh water and rub dry.
- After everything is dry place appliance back into service.

Daily Use

Replace the lamp

The internal light is a LED type. To replace the lamp, please contact qualified technician.

Troubleshooting

 **Caution!** Before troubleshooting, disconnect the power supply. Only a qualified electrician of competent person must do the troubleshooting that is not in this manual.

Important! There are some sounds during normal use (compressor, refrigerant circulation).

Problem	Possible cause	Solution
Appliance does not work	Temperature regulation knob is set at coldest	Set the knob at other switch on the appliance.
	Mains plug is not plugged in or is loose	Insert mains plug.
	Fuse has blown or is defective	Check fuse, replace if necessary.
	Socket is defective	Mains malfunctions are to be corrected by an electrician.
Appliance freezes or cools too much	Temperature is set too cold or the appliance runs at coldest.	Turn the temperature regulator to a warmer setting temporarily.
The food is not frozen enough.	Temperature is not properly adjusted.	Please look in the initial Temperature Setting section.
	Door was open for an extended period.	Open the door only as long as necessary.
	A large quantity of warm food was placed in the appliance within the last 24 hours.	Turn the temperature regulation to a colder setting temporarily.
	The appliance is near a heat source.	Please look in the installation location section.
Heavy build up of frost on the door seal.	Door seal is not air tight.	Carefully warm the leaking sections of the door seal with a hair dryer (on a cool setting). At the same time shape the warmed door seal by hand such that it sits correctly.
Unusual noises	Appliance is not level.	Re-adjust the feet.
	The appliance is touching the wall or other objects.	Move the appliance slightly.
	A component, e.g. a pipe, on the rear of the appliance is touching another part of the appliance or the wall.	If necessary, carefully bend the component out of the way.
Water on the floor	Water drain hole is blocked.	See the Cleaning and Care section.
Side panels are hot.	It's normal. Heat exchange parts are in the sides.	Take gloves to touch sides if needed.

If the malfunction shows again, contact the Service Center.

These data are necessary to help you quickly and correctly. Write the necessary data here, refer to the rating plate.



πλαισιο●

Θέση Σκληρή, Μαγούλα Αττικής

www.plaisio.gr

Τηλ. 800-11-12345

(γραμμή χωρίς χρέωση)

210 2895000

(απο κινητό)