









Step 1

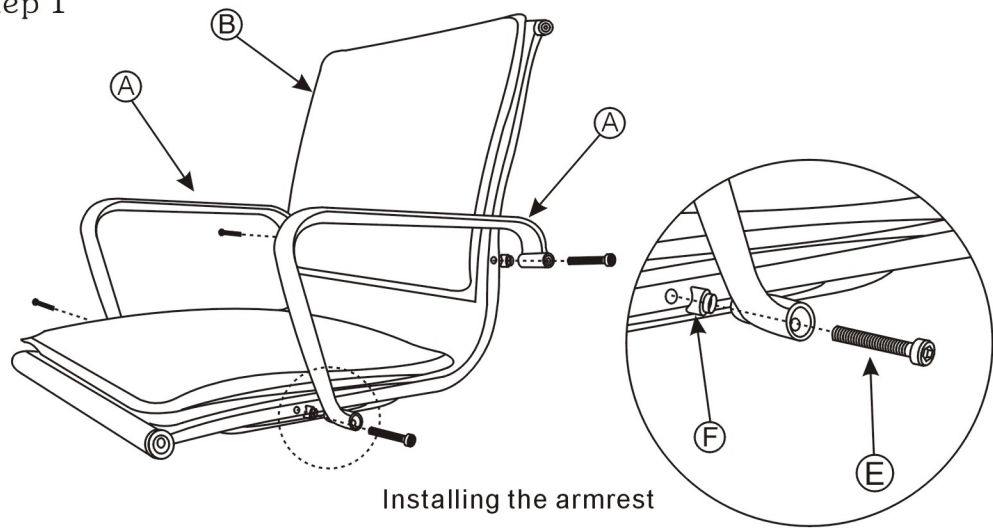


Installing the armrest

		
Chrome armrest	Chair body	Chrome chair frame
Ⓐ X2	Ⓑ X1	Ⓒ X1
		
Install the armrest screws: 8*55	Armrest cover	Installing the chrome chair frame Screws:8*35
Ⓔ X4	Ⓕ X4	Ⓖ X4

Step 2

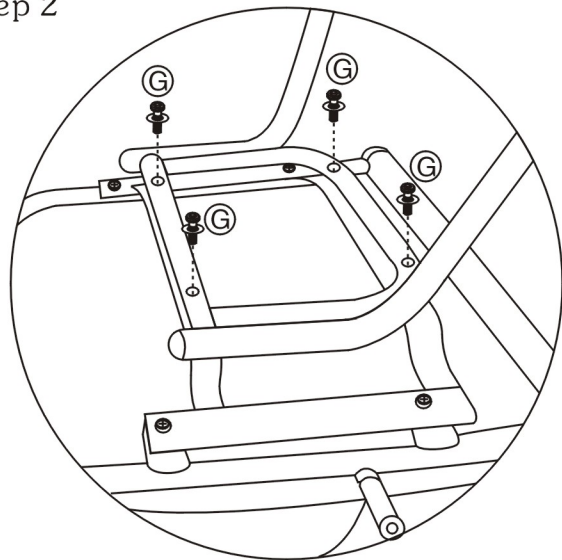

The chrome chair frame & chair body join together

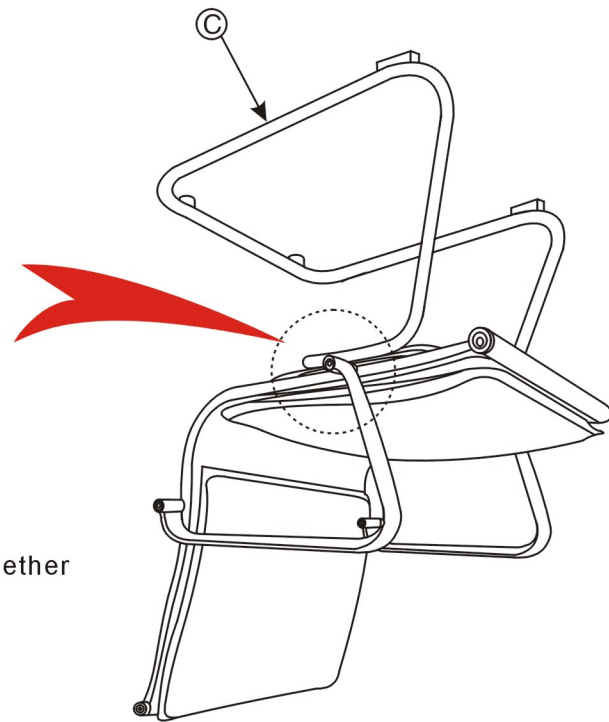

Step 3



920C Installing steps