


English

STORE CABINET

ASSEMBLY INSTRUCTION

Thanks for purchasing one of our products, please read carefully the assembly instructions before the installation (Attention: Do not tighten the screws before all screws are in place).

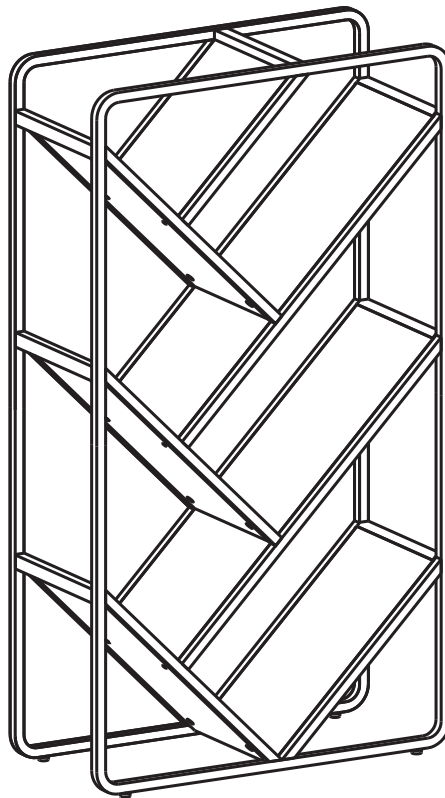

TWO PEOPLE REQUIRED

MODEL MB-5051

General Care:





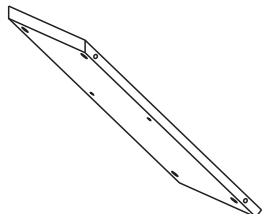
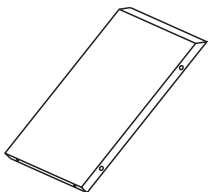
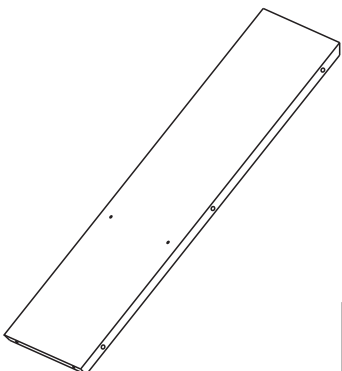
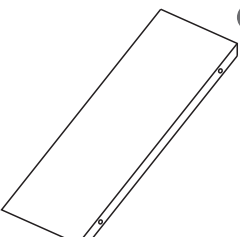



-Keep your furniture out direct sunlight-Use desk pads and coasters to protect the surface from dents,scratches,and moisture from hot or cold liquids.

Cleaning:





-For cleaning, wipe the surface with a damp (not wet) cloth or wipe dry with a clean lint free cotton cloth.
-Window cleaning liquid or a similar cleaning liquid can be used to clean glass surface.

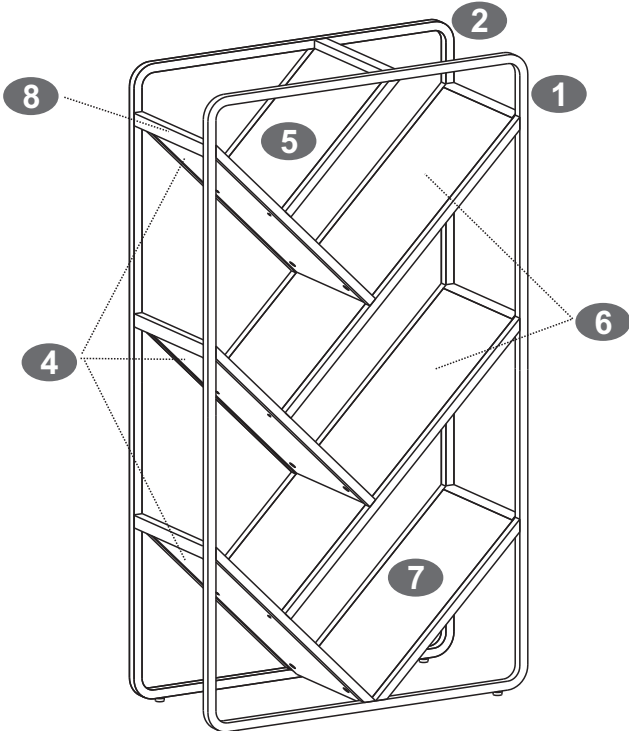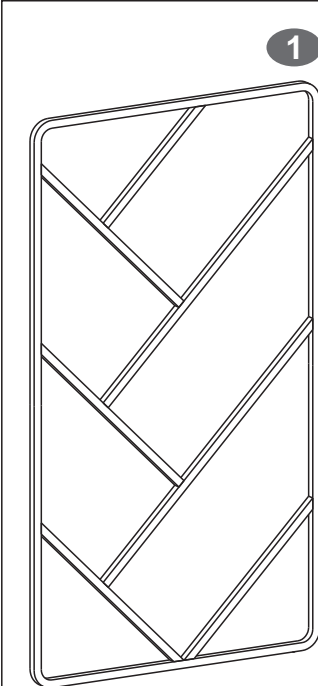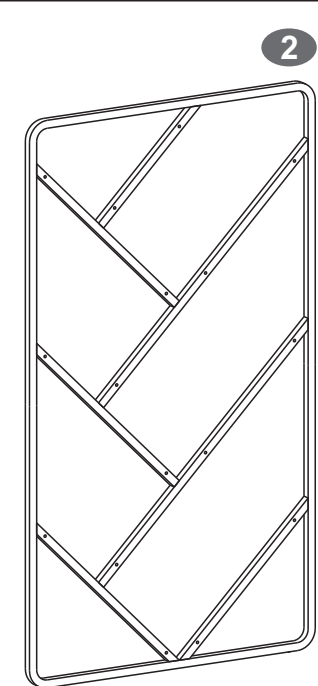




■ PARTS LIST

		 X1	 X1
 X4	 X3	 X1	 X2
 X1	 X7	 X4	 X1




▪ SCREWS LIST

PART	QTY.	ITEM		PART	QTY.	ITEM	
A	10	5X40 MM		C	32	Φ 15 MM	
B	32	6X40 MM			1		



6X40MM BOLT INSTALLATION AS BELOW:

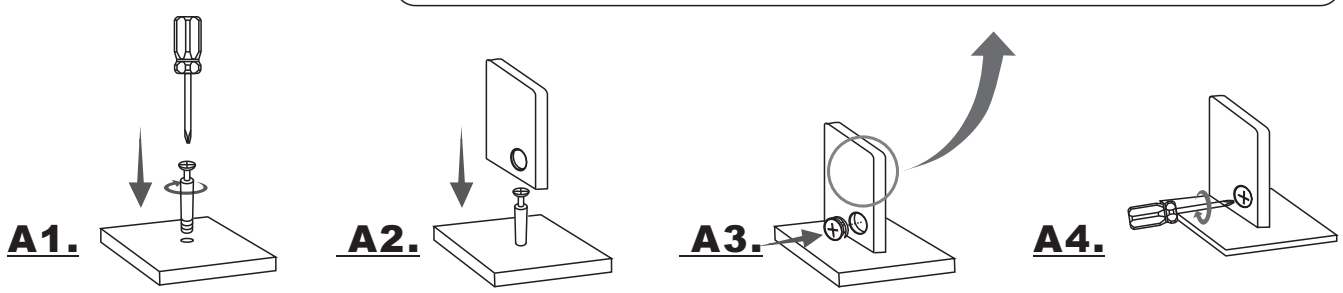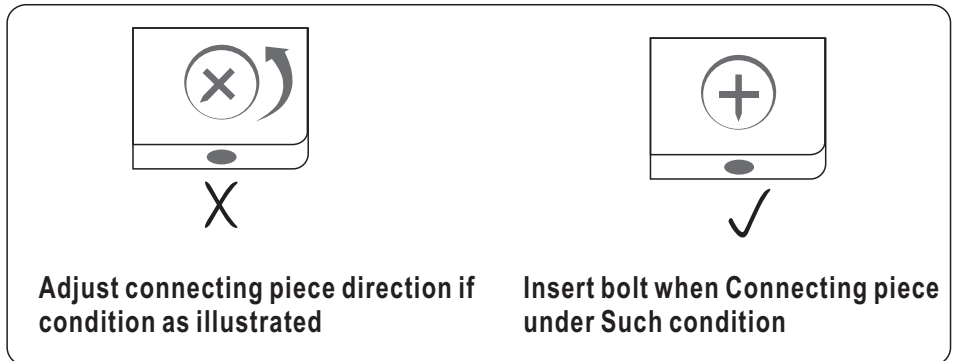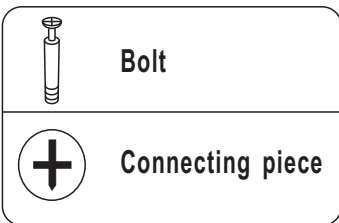

ASSEMBLY STEPS:

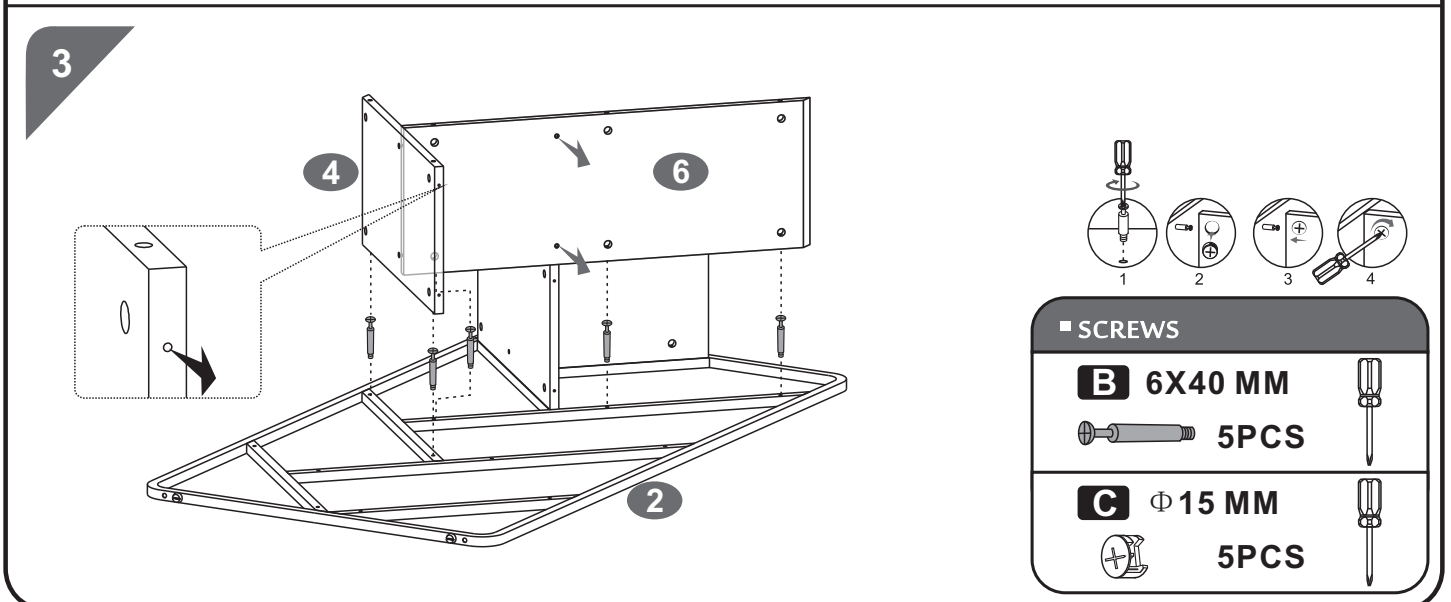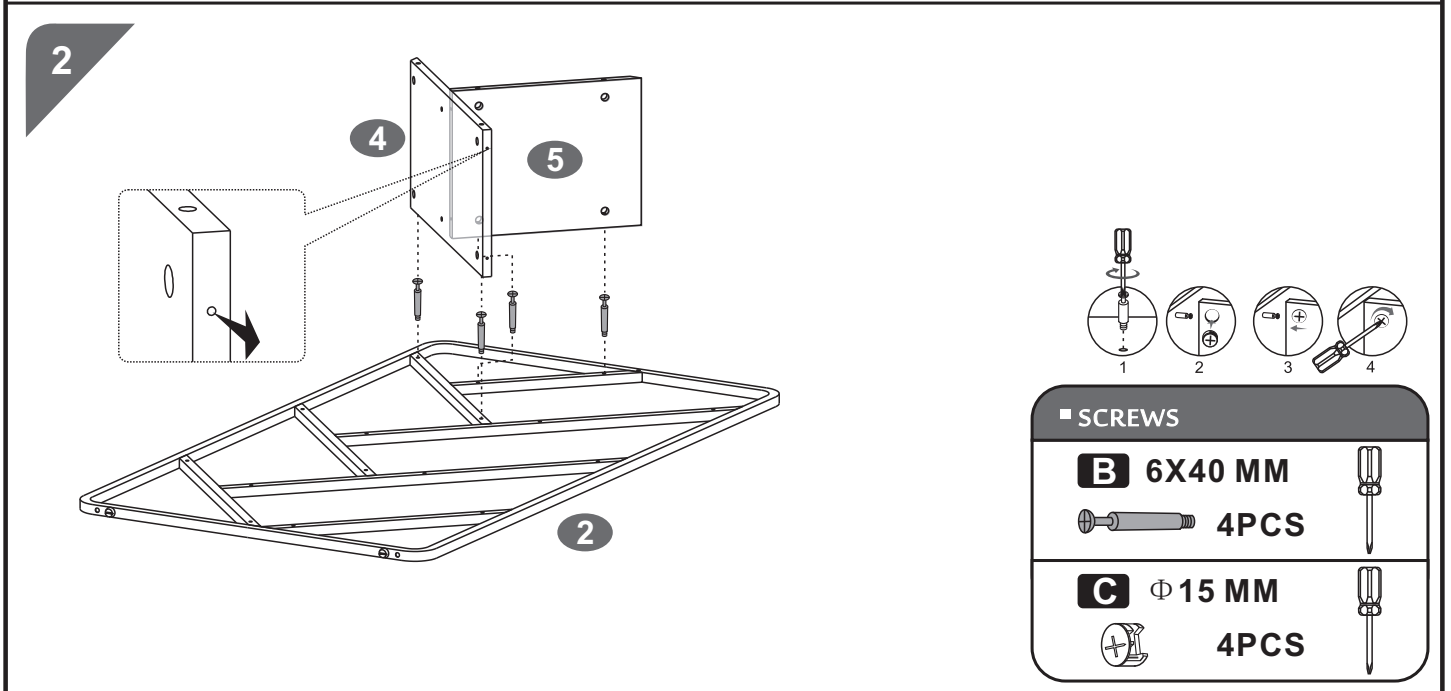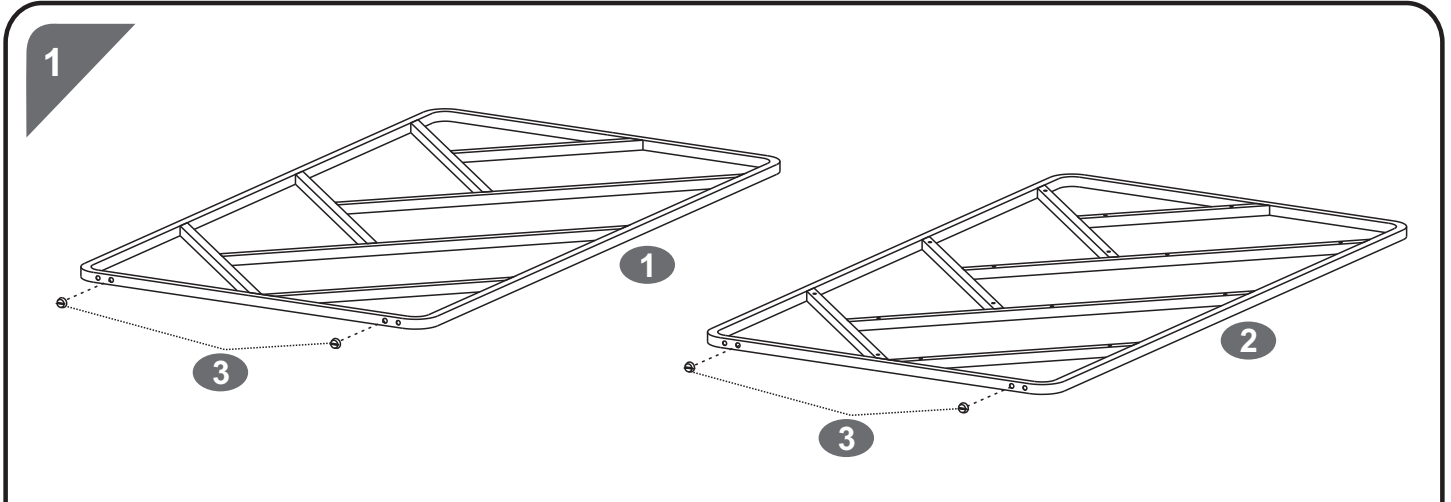

4

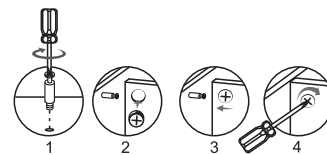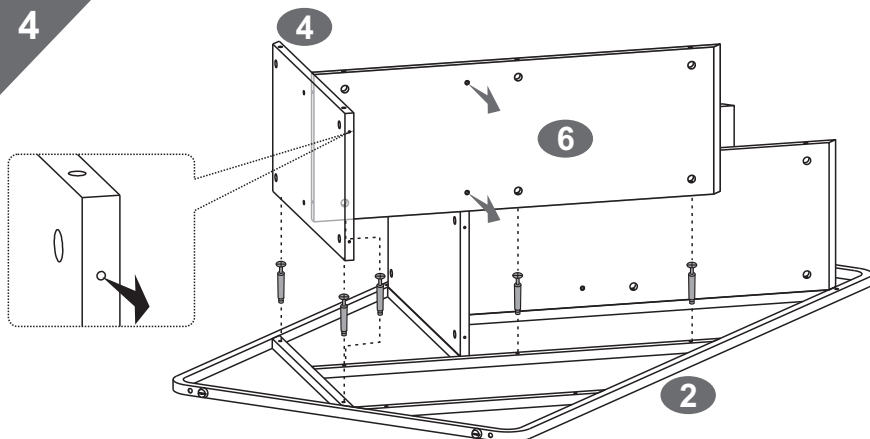

SCREWS



B 6X40 MM
5PCS



C Φ 15 MM
5PCS



5

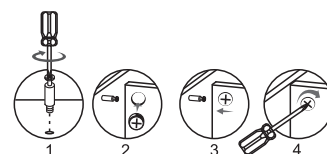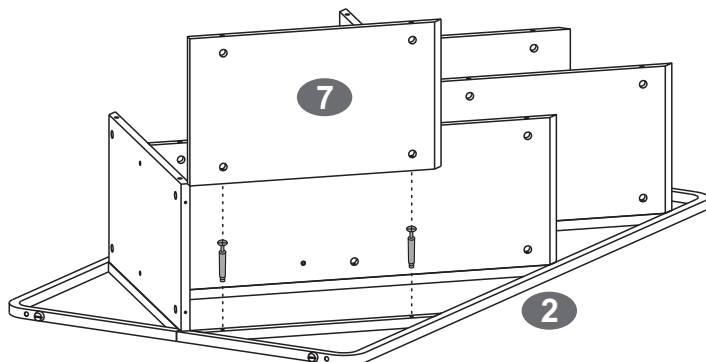

SCREWS


B 6X40 MM
2PCS



C Φ 15 MM
2PCS



6


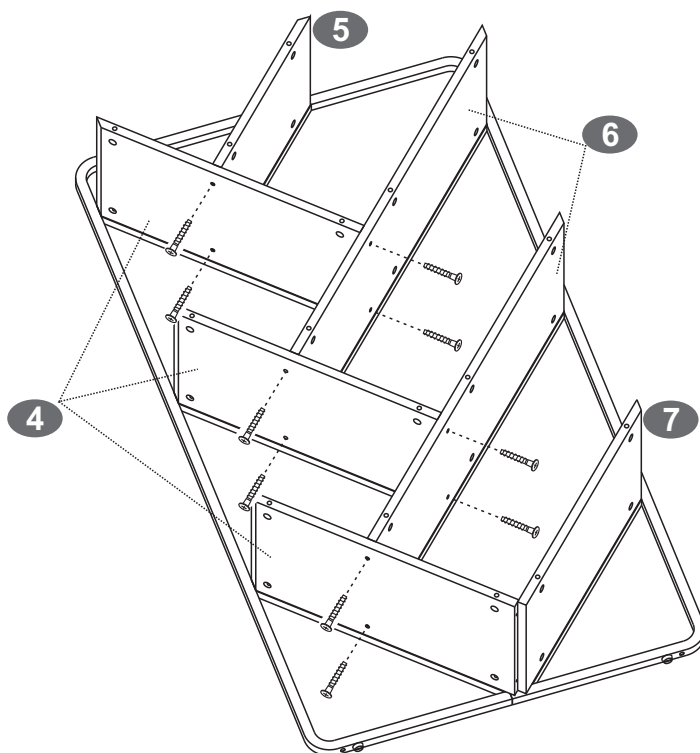


SCREWS

A 5X40 MM
10PCS



7

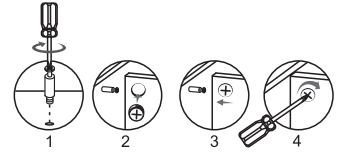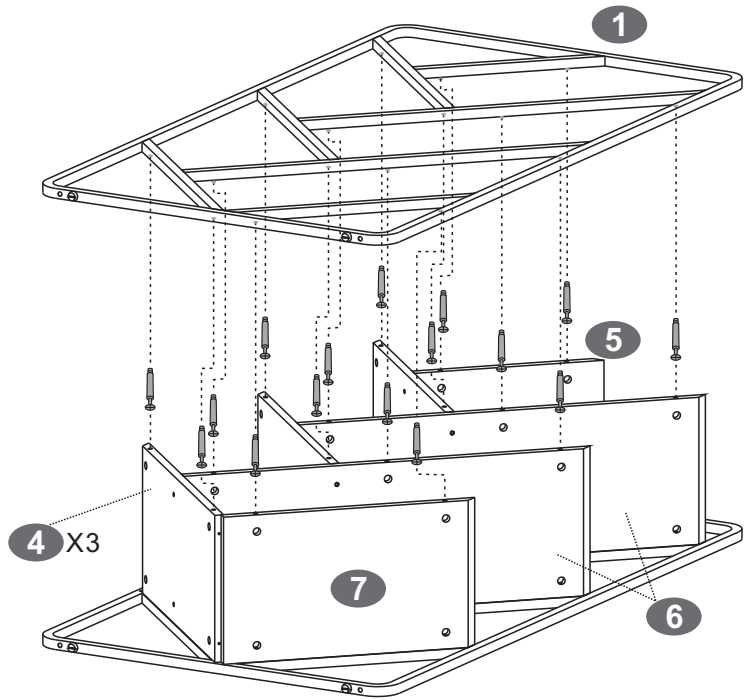

SCREWS

B 6X40 MM
16PCS

C Φ 15 MM
16PCS

8

